

# DENON

DVD AUDIO-VIDEO / SUPER AUDIO CD PLAYER

## DVD-2930CI

---

OPERATING INSTRUCTIONS

## SAFETY PRECAUTIONS



**CAUTION**  
**RISK OF ELECTRIC SHOCK**  
**DO NOT OPEN**



### CAUTION:

**TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### WARNING:

**TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

## LABELS (for U.S.A. model only)

### CERTIFICATION

THIS PRODUCT COMPLIES WITH DHHS RULES 21CFR SUBCHAPTER J APPLICABLE AT DATE OF MANUFACTURE.

### CAUTION:

**USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.**


**THIS PRODUCT SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT PROPERLY QUALIFIED SERVICE PERSONNEL.**

# SAFETY INSTRUCTIONS

1. Read Instructions – All the safety and operating instructions should be read before the product is operated.
2. Retain Instructions – The safety and operating instructions should be retained for future reference.
3. Heed Warnings – All warnings on the product and in the operating instructions should be adhered to.
4. Follow Instructions – All operating and use instructions should be followed.
5. Cleaning – Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners.
6. Attachments – Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. Water and Moisture – Do not use this product near water – for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
8. Accessories – Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
9. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
10. Ventilation – Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
11. Power Sources – This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
12. Grounding or Polarization – This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.



13. Power-Cord Protection – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
15. Outdoor Antenna Grounding – If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure A.
16. Lightning – For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
17. Power Lines – An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
18. Overloading – Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
19. Object and Liquid Entry – Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
20. Servicing – Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
21. Damage Requiring Service – Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a) When the power-supply cord or plug is damaged,
  - b) If liquid has been spilled, or objects have fallen into the product,
  - c) If the product has been exposed to rain or water,
  - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation,
  - e) If the product has been dropped or damaged in any way, and
  - f) When the product exhibits a distinct change in performance – this indicates a need for service.
22. Replacement Parts – When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
23. Safety Check – Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
24. Wall or Ceiling Mounting – The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
25. Heat – The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

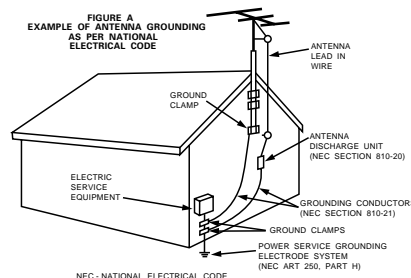

**FCC INFORMATION (For US customers)****1. PRODUCT**

This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this product may not cause harmful interference, and (2) this product must accept any interference received, including interference that may cause undesired operation.

**2. IMPORTANT NOTICE: DO NOT MODIFY THIS PRODUCT**

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modification not expressly approved by DENON may void your authority, granted by the FCC, to use the product.

**3. NOTE**

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the local retailer authorized to distribute this type of product or an experienced radio/TV technician for help.

This Class B apparatus complies with Canadian ICES-003.


Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

**Copyrights**

- It is prohibited by law to reproduce, broadcast, rent or play discs in public without the consent of the copyright holder.
- La reproduction, la diffusion, la location, le prêt ou la lecture publique de ces disques sont interdits sans le consentement du détenteur des droits d'auteur.
- De acuerdo con las leyes está prohibido reproducir, emitir, alquilar o interpretar discos en público sin la autorización del propietario de los derechos de autor.

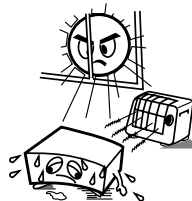**NOTE ON USE**


- Avoid high temperatures.  
Allow for sufficient heat dispersion when installed in a rack.

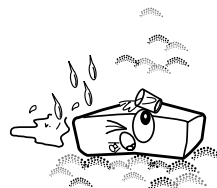

- Keep the apparatus free from moisture, water, and dust.



- Do not let foreign objects into the apparatus.

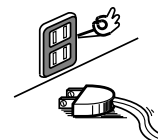


- Unplug the power cord when not using the apparatus for long periods of time.



- Do not let insecticides, benzene, and thinner come in contact with the apparatus.



- Handle the power cord carefully.  
Hold the plug when unplugging the cord.

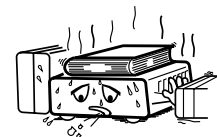

\* (For apparatuses with ventilation holes)

- Do not obstruct the ventilation holes.



- Never disassemble or modify the apparatus in any way.

# Getting Started

Thank you for purchasing this DENON DVD Audio-Video / Super Audio CD player. Please read the operation instructions thoroughly in order to acquaint yourself with the DVD Audio-Video / Super Audio CD player and achieve maximum satisfaction from it.  
Be sure to keep these instructions for future reference, should any questions or problems arise.

## Contents

Getting Started	
<b>Accessories</b> .....	3
<b>Before using</b> .....	3
<b>About discs</b>	
Discs usable on this set .....	3, 4
Holding discs .....	4
Loading discs .....	4
Cautions on loading discs .....	4
Cautions on handling .....	4
Cautions on storing discs .....	4
Cleaning discs .....	4
<b>About the remote control unit</b>	
Inserting the batteries .....	5
Operating range of the remote control unit .....	5
<b>Part names and functions</b>	
Front panel .....	6
Display .....	6
Rear panel .....	7
Remote control unit .....	7
Connections	
<b>Cable indications</b> .....	8
<b>Connection to a TV</b> .....	9
<b>Digital connection to an AV amplifier with built-in decoder</b> .....	9, 10
<b>Connection to a device with 2-channels of analog audio inputs</b> .....	10
<b>Surround connections to a device with 5.1-channels of analog audio inputs</b> .....	10
<b>DENON LINK connections</b> .....	11
<b>Connection to a device with an HDMI terminal</b> .....	11, 12
<b>Digital connection to a recording device (MD recorder, etc.)</b> .....	12
<b>Connecting the power supply cord</b> .....	12

Making the initial settings	
<b>Table of initial settings</b> .....	13, 14
<b>Operations for making the initial settings</b> .....	15
<b>Language setting</b> .....	16
<b>Digital interface settings</b>	
HDMI RGB picture quality settings .....	17
HDMI audio .....	17
HDMI speaker settings .....	17~19
HDMI auto format .....	19
DENON LINK .....	19
<b>Video setting</b>	
TV aspect ratio .....	20
TV type .....	20
Component video output .....	20
AV Synchronized .....	21
Offset time .....	21
Squeeze mode .....	21
Progressive mode .....	21, 22
Horizontal display range .....	22
<b>Audio settings</b>	
Audio channels .....	22
Digital output .....	23
Downsampling .....	23
Source direct .....	23, 24
Bass enhancer .....	24
Dynamic range compression .....	24
<b>Viewing restriction setting</b>	
Viewing restriction level .....	25
Password .....	25
Displaying the registration code .....	26
<b>Special settings</b>	
Player mode .....	26
Captions .....	26
Wallpaper .....	26
Screensaver .....	27
Display .....	27
Auto power mode .....	27
Slide switching time .....	27

Other settings	
<b>Using the pure direct mode</b> .....	28
<b>Making the settings for the picture output from the HDMI terminal</b>	
Changing the signal format .....	29
Changing the resolution .....	29
<b>Adjusting the picture quality</b>	
Storing the picture quality settings in the memory .....	30
Gamma correction .....	31

Basic Operation	
<b>Turning the power on</b> .....	32
<b>Loading discs</b> .....	32
<b>Playing discs</b> .....	32
To stop playback .....	32
To pause playback .....	33
<b>About DVD-Video discs</b> .....	33
Playing DVD-Video discs .....	33
Using the top menu and DVD menu .....	34
Switching the audio language (Multiple-Audio Function) .....	34
Switching the subtitle language (Multiple-Subtitle Function) .....	34
Switching the angle (Multiple-Angle Function) .....	34
<b>About DVD-Audio discs</b> .....	34
Switching between groups and tracks .....	35
Playing bonus groups .....	35
Selecting still pictures .....	35
<b>About Super Audio CDs</b> .....	35
Setting the top priority playback layer for Super Audio CDs .....	36
<b>About Video and Music CDs</b> .....	36
Playing discs with playback control .....	36
<b>About discs containing MP3 and WMA format files</b> .....	36, 37
<b>About discs containing DivX® format files</b> .....	38
<b>About discs containing still picture files</b> .....	38
Playing a disc containing files in JPEG format .....	38
Playing Picture CDs and Fujicolor CDs .....	39
<b>Repeat and random play of MP3, WMA, JPEG and DivX® files</b> .....	40

## Getting Started


Convenient operations	
Fast-forwarding/Fast-reversing .....	40
Moving to the beginning .....	40
Searching using the NUMBER buttons .....	40
Frame-by-frame playback (for DVD-Video discs and Video CDs only) .....	41
Slow playback .....	41
Repeat playback .....	41, 42
Repeating a section between two specific points (A-B repeat playback) .....	42
Programmed playback .....	42
Playing in random order .....	42
Operating using the on-screen display .....	43, 44
Marking scenes you want to see again later .....	44
Adding marks .....	44
Calling out marked scenes .....	44
Zoomed play .....	45
Setting the video format .....	45
Adjusting the brightness of the display .....	45
Others	
About the DENON LINK function .....	46
AL24 Processing Plus .....	46
Copyright protection technology .....	46
Resetting .....	46
Registered trademarks .....	46
Troubleshooting .....	47
Specifications .....	48

## Getting Started

### Accessories

Check that the following parts are attached in addition to the main unit:

- ① Operating instructions .....1
- ② Service station list.....1
- ③ Power supply cord (Cord length: Approx. 59-1/16 ft 1.5 m)....1
- ④ Remote control unit (RC-1037) .....1
- ⑤ R6P/AA batteries .....2
- ⑥ Audio/Video cable (Cable length: Approx. 59-1/16 ft 1.5 m)....1
- ⑦ DENON LINK cable (Cable length: Approx. 59-1/16 ft 1.5 m) ...1

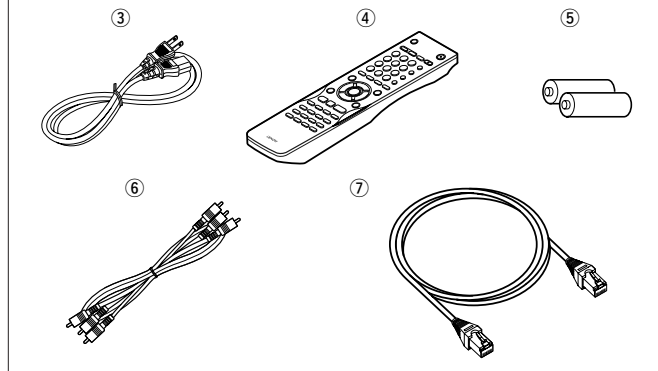

### Before using

Pay attention to the following before using this unit:

#### • Moving the unit.

To prevent short-circuits or damaged wires in the connection cables, always unplug the power supply cord and disconnect the connection cables between all other audio components when moving the unit.

#### • Cautions on using mobile phones.

Using a mobile phone near this unit may result in noise. If so, move the mobile phone away from this unit when it is in use.

#### • Condensation (dew).

Water droplets may condense on internal operation parts if the set is brought into a heated room from the cold outdoors or when the room is heated rapidly. If this happens, the set may not operate properly.

#### • Should condensation occur.

The condensation will evaporate in one hour or less, at which time the system will function normally.

#### • Before turning the power operation switch on.

Check once again that all connections are correct and that there are not problems with the connection cables. Always set the power operation switch to the standby position before connecting and disconnecting connection cables.

#### • Store these instructions in a safe place.

After reading, store this instructions along with the warranty card in a safe place.

#### • Power is supplied to some of the circuitry even when the power is set to the standby mode using the power operation switch. When traveling or leaving home for long periods of time, be sure to unplug the power supply cord from the power outlet.


#### • Note that the illustrations in these instructions may differ from the actual unit for explanation purposes.

### About discs

#### Discs usable on this set

The discs playable on the DVD-2930CI are the discs shown on the table at the right.

Do not use discs with special shapes, as they could damage the player.

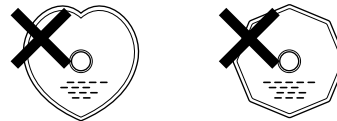

#### NOTE:

- DVD players and DVDs have specific region numbers (assigned by country). The disc's region number must be the same as the player's or the disc cannot be played. The DVD-2930CI has region number 1.



## Getting Started

Playable discs	Mark (logo)	Signal content	Disc size
DVD-Audio (*1)		Digital audio + Digital video (MPEG2 format)	12 cm
DVD-Video (*1)			8 cm
DVD-R/DVD+R (*2)			
DVD-RW (*2) (*3) DVD+RW (*2)			
SUPER AUDIO CD		Digital audio	12 cm
Video CD (*1)		Digital audio + Digital video (MPEG1 format)	12 cm 8 cm
CD		Digital audio	12 cm
CD-R (*4)		MP3	8 cm
CD-RW (*4)		Digital images (JPEG format)	
Picture CD		Digital images (JPEG format)	12 cm
Fujicolor CD		Digital images (JPEG format)	12 cm
WMA		Digital audio	12 cm
DivX®		Digital audio + Digital video (MPEG4 format)	12 cm

## Getting Started

- \*1** : Some DVD-Audio discs, DVD-Video discs and video CDs may be designed to by the software producer to operate in ways other than described in this manual.
- \*2** : This player can play DVD±R/DVD±RW discs recorded in video format on DVD recorders. Depending on the recording conditions, however, the disc may not be recognized or it may not play normally (the picture or sound may be broken, etc.). Discs that have not been finalized cannot be played.
- \*3** : DVD-RW discs can be played if they have been recorded in the VR (Video Recording) mode and finalized.
- \*4** : Depending on the recording conditions, CD-R/CD-RW discs may not play normally.



### The discs described below cannot be played:

- DVDs with region numbers other than "1" or "ALL"
- DVD-ROM/RAM (For DVD-ROM discs, data files in DivX® 3.11, 4.x, 5.x and 6 format can be played)
- CD-ROM (Data files in MP3, JPEG, WMA, and DivX® 3.11, 4.x, 5.x and 6 can be played)
- VSD/CVD/SVCD
- CDV (Only the audio part can be played)
- CD-G (Only the audio signals can be output)
- Photo CDs, etc.



## Holding discs



Do not touch the signal surface.

## Loading discs

- Set the disc with the labeled side facing up.
- Make sure the disc tray is fully open when inserting the disc.
- Place the discs flatly, 12 cm discs in the outer tray guide (Figure 1), 8 cm discs in the inner tray guide (Figure 2).

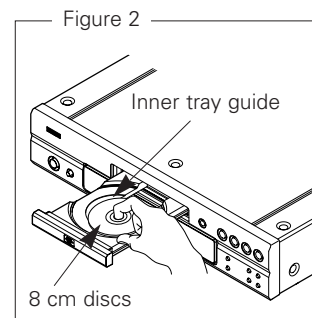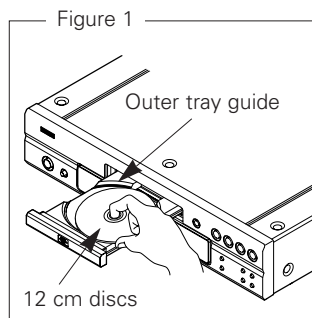

- Place 8 cm discs in the inner tray guide without using an adapter.



- If a disc that cannot be played is loaded or the disc is loaded upside-down, "0h00m00s" is displayed on the player's display.

### NOTE:

- Do not push the disc tray in by hand when the power is off. Doing so could damage it.

## Cautions on loading discs

- Only load one disc at a time. Loading two or more discs can damage the set or scratch the discs.
- Do not use cracked or warped discs or discs that have been repaired with adhesive, etc.
- Do not use discs on which the sticky part of cellophane tape or labels is exposed or on which there are traces of where labels have been removed. Such discs could get caught inside the player and damage it.

## Getting Started

## Cautions on handling


- Do not get fingerprints, oil or dirt on discs.
- Take special care not to scratch discs when removing them from their cases.
- Do not bend or heat discs.
- Do not enlarge the hole at the center.
- Do not write on the labeled (printed) surface with ball-point pens, pencils, etc., or stick new labels on discs.
- Water droplets may form on discs if they are moved suddenly from a cold place (outdoors for example) to a warm place, but do not try to dry them off using a hairdryer, etc.

## Cautions on storing discs


- Be sure to remove discs after using them.
- Be sure to store discs in their cases to protect them from dust, scratches, warping, etc.
- Do not store discs in the following places:
  1. Places exposed to direct sunlight for long periods of time
  2. Dusty or humid places
  3. Places exposed to heat from heating appliances, etc.

## Cleaning discs

- If there are fingerprints or dirt on discs, wipe them off before using the disc. If not the sound quality could be reduced and the sound may be broken.
- Use a commercially available disc cleaning set or a soft cloth to clean discs.

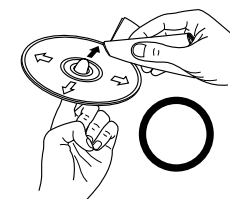

Gently wipe the disc from the inside towards the outside.

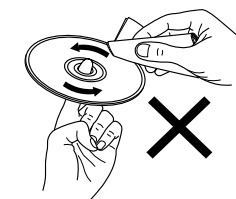

Do not wipe with a circular motion.

### NOTE:


- Do not use record spray, antistatic agents, or benzene, thinner or other solvents.

## Getting Started

## About the remote control unit

## Inserting the batteries

- ① Remove the cover.
- ② Set two R6P/AA batteries in the battery compartment in the indicated direction.

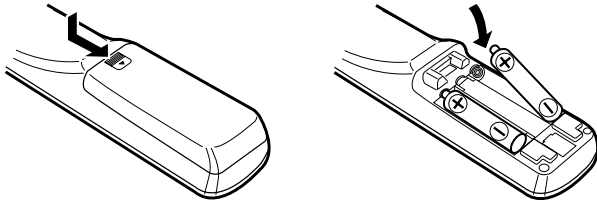


- ③ Set the cover back in place.

**Notes on batteries:**

- Replace the batteries with new ones if the set does not operate even when the remote control unit is operated nearby the unit. (The attached batteries are only for verifying operation.)
- When inserting the batteries, be sure to do so in the proper direction, following the “+” and “-” marks in the battery compartment.
- To prevent damage or leakage of battery fluid:
  - Do not use a new battery together with an old one.
  - Do not use two different types of batteries.
  - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.
- Remove the batteries from the remote if it will not be in use for long periods.

## Operating range of the remote control unit

- Point the remote control unit at the remote sensor when operating it.
- The remote control unit can be used from a distance of up to about 22 feet / 7 meters, at a horizontal angle of up to 30° with respect to the sensor.

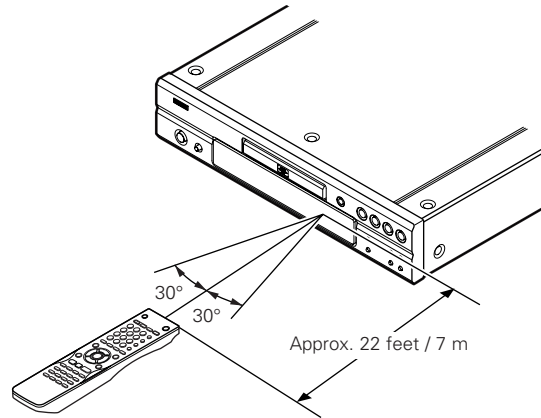**NOTE:**

- It may be difficult to operate the remote control unit if the remote sensor is exposed to direct sunlight or strong artificial light.

## Getting Started




# Getting Started

## Part names and functions

For buttons not explained here, see the page indicated in parentheses ( ).


### Front panel

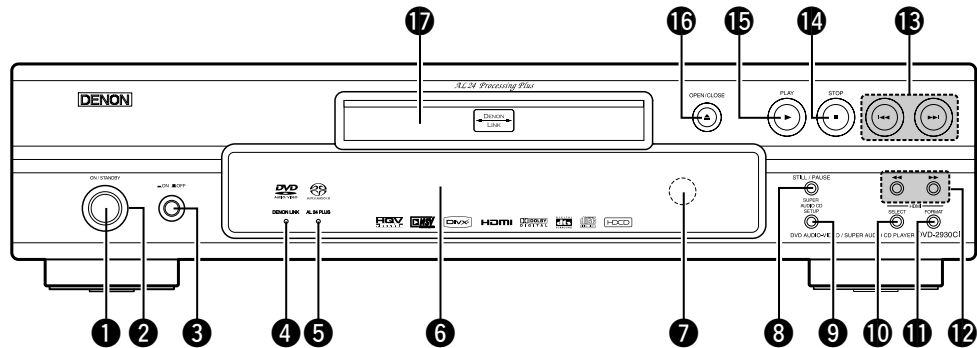

- 1 Power operation switch (ON/STANDBY) .....(32)
- 2 Power indicator .....(32)
- 3 Power switch (ON/OFF) .....(15, 32)
- 4 DENON LINK indicator .....(46)
- 5 AL24 PLUS indicator .....(46)
- 6 Display
- 7 Remote control sensor .....(5)
- 8 STILL/PAUSE button .....(33)
- 9 SUPER AUDIO CD SETUP button .....(36)
- 10 HDMI SELECT button .....(29)
- 11 HDMI FORMAT button .....(29)
- 12 Slow/Search buttons (◀◀, ▶▶) .....(40)
- 13 Skip buttons (◀◀◀, ▶▶▶) .....(39)
- 14 STOP button (■) .....(32)
- 15 PLAY button (▶) .....(32)
- 16 OPEN/CLOSE button (⏏) .....(32)
- 17 Disc Tray .....(4)

# Getting Started


## Display

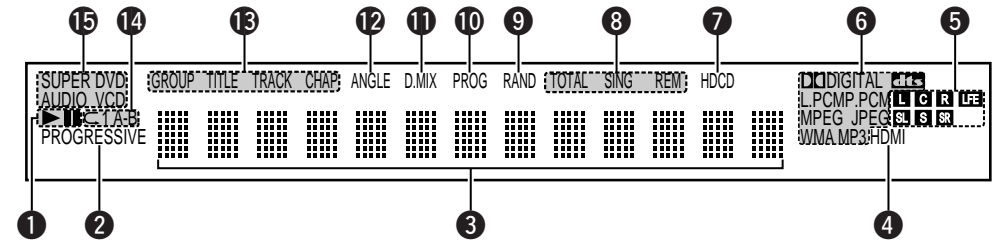

- 1 ▶ : Displayed during playback.  
 ■ : Displayed when in the pause or frame-by-frame play mode.
- 2 Displayed when "COMPONENT VIDEO OUT" is set to "PROGRESSIVE".
- 3 Various types of information on the disc, the elapsed playing time, etc., are displayed here.
- 4 Displayed when HDMI video or audio signals are being output. Flashes when connection of the HDMI terminal is being checked.
- 5 These indicate the channels being played.  
 L : Front left  
 C : Center  
 R : Front right  
 LFE : Subwoofer  
 SL : Surround left  
 S : Surround monaural  
 SR : Surround right
- 6 These indicate the format being played.
- 7 Displayed when playing HDCD-compatible discs.
- 8 Indicates the time display mode.
- 9 Displayed during random playback.
- 10 Displayed during program playback.
- 11 Displayed when the audio signals can be down-mixed.
- 12 Displayed when playing discs containing multiple angles.
- 13 These indicate the type of the different sections of the currently playing disc.
- 14 Displayed during repeat playback.
- 15 These indicate the type of the currently playing disc.

Getting Started


Rear panel

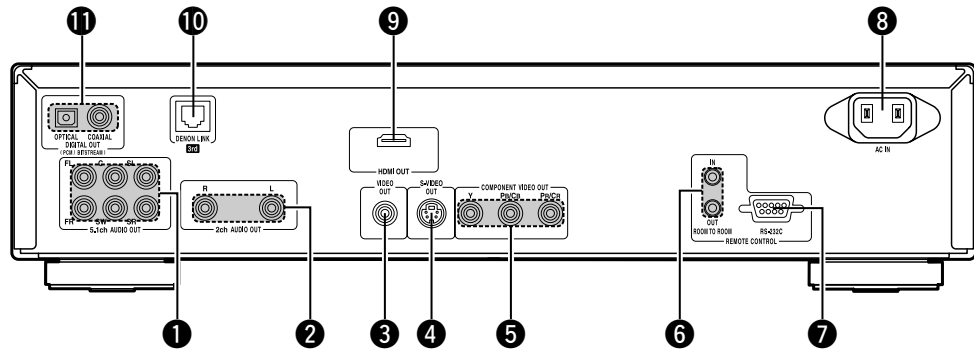

- ❶ 5.1ch AUDIO OUT terminals .....(10)
- ❷ 2ch AUDIO OUT terminals .....(9, 10)
- ❸ VIDEO OUT terminal.....(9)
- ❹ S-VIDEO OUT terminal .....(9)
- ❺ COMPONENT VIDEO OUT terminals .....(9)
- ❻ ROOM TO ROOM IN/OUT jacks  
Control terminal for system extension.
- ❼ RS-232C input/output terminal  
Control terminal for system extension.
- ❽ AC inlet .....(12)
- ❾ HDMI OUT terminal .....(11)
- ❿ DENON LINK output terminal .....(11)
- ⓫ DIGITAL OUT COAXIAL/  
OPTICAL terminals.....(9, 12)

Getting Started

Remote control unit

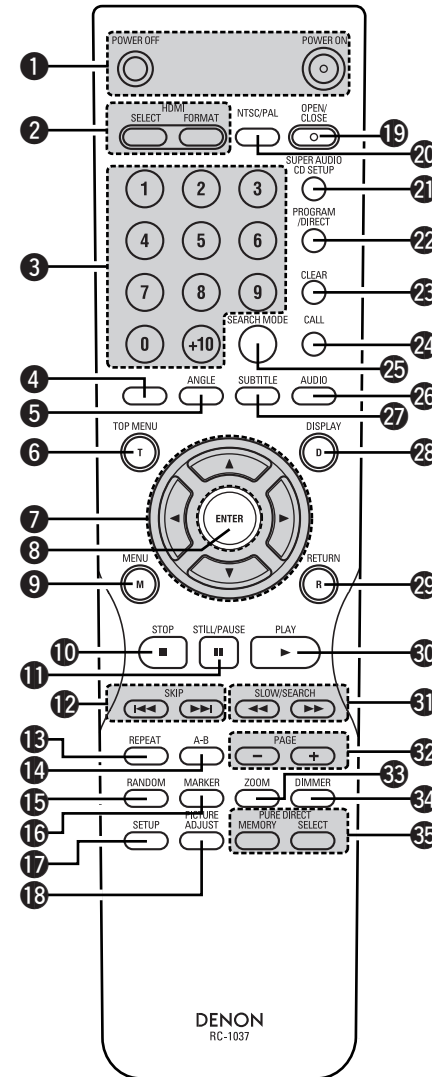

- ❶ POWER ON/OFF buttons .....(32)
- ❷ HDMI SELECT/FORMAT buttons .....(29)
- ❸ Number buttons (0 ~ 9, +10).....(16, 34)
- ❹ This button does not function.
- ❺ ANGLE button .....(34)
- ❻ TOP MENU button .....(34)
- ❼ Cursor buttons (Δ ▽ ◀ ▶) .....(15)
- ❽ ENTER button.....(15)
- ❾ MENU button .....(34)
- ❿ STOP button .....(32)
- ⓫ STILL/PAUSE button .....(33)
- ⓬ SKIP buttons .....(39, 40)
- ⓭ REPEAT button .....(37)
- ⓮ A-B button .....(42)
- ⓯ RANDOM button .....(37)
- ⓰ MARKER button .....(44)
- ⓱ SETUP button.....(15)
- ⓲ PICTURE ADJUST button.....(30)
- ⓳ OPEN/CLOSE button .....(32)
- ⓴ NTSC/PAL button .....(45)
- ⓵ SUPER AUDIO CD SETUP button.....(36)
- ⓶ PROGRAM/DIRECT button .....(42)
- ⓷ CLEAR button .....(35)
- ⓸ CALL button .....(42)
- ⓹ SEARCH MODE button.....(35)
- ⓺ AUDIO button.....(34)
- ⓻ SUBTITLE button .....(34)
- ⓼ DISPLAY button.....(37, 43)
- ⓽ RETURN button.....(19)
- ⓿ PLAY button.....(32)
- ⓾ SLOW/SEARCH buttons.....(40)
- ⓿ PAGE +/- buttons .....(35)
- ⓿ ZOOM button .....(39)
- ⓿ DIMMER button .....(45)
- ⓿ PURE DIRECT MEMORY/SELECT buttons ... (28)

# Connections

## Cable indications

Connect using the connection cables shown below.

Audio cable		Video cable	
<b>A</b> Analog audio connections  Pin-plug cable <b>B</b> Analog audio connections  Pin-plug cable <b>C</b> Coaxial digital connections  Coaxial digital cable (75 Ω/ohms pin-plug) <b>D</b> Digital connections (Optical)  Optical fiber cable <b>E</b> DENON LINK connections  DENON LINK cable (Included)		<b>F</b> Video connections  Video cable (75 Ω/ohms pin-plug cable) <b>G</b> S-Video connections  S-terminal cable <b>H</b> Component video connections  Component video cable	
Signal direction		Audio and Video cable	
Audio signal  Video signal 		<b>I</b> HDMI connections  HDMI cable <b>J</b> Analog audio/video connections  Audio/video cable (Included)	


### NOTE:

- Do not plug in the power supply cord until all connections have been completed.
- When making connections, also refer to the operating instructions of the other components.
- Be sure to connect the left and right channels properly (left with left, right with right).
- Making connections with the power turned on could result in noise or damage the speakers.
- Bunching the power supply cords and connection cables together could result in humming or noise.
- Do not connect to the amplifier's PHONO input terminal. Doing so could result in damage.
- Install the player in a place where the surrounding temperature is 35°C or below.


Connections

Connection to a TV

❑ For a TV equipped with a video input or S-Video input terminal

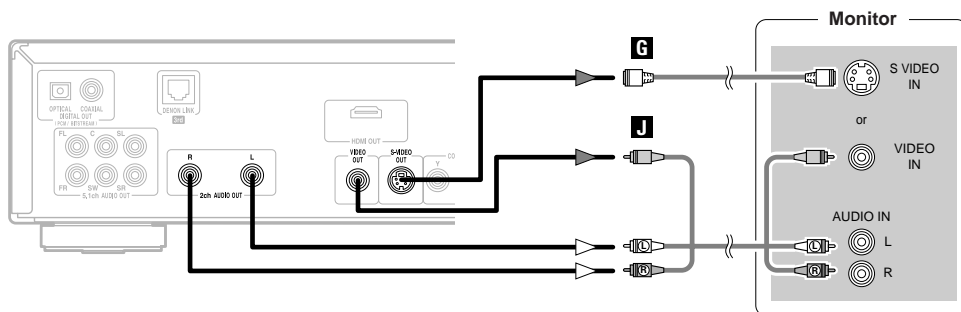

❑ For a TV equipped with component video input terminals

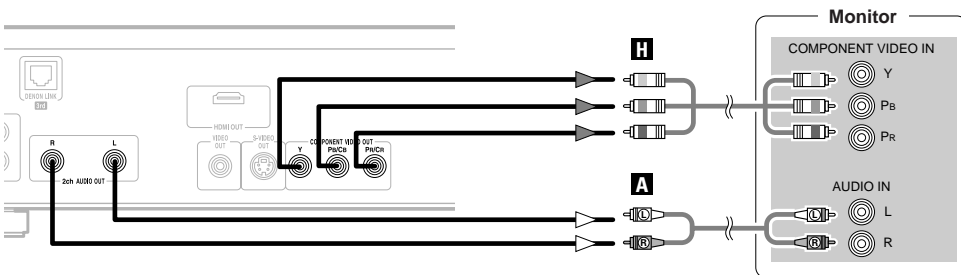

- If the TV to which the player is to be connected is compatible with progressive scan video, connect to the component video input terminals.
- The DVD-2930CI's progressive output (525P) is compatible with Macrovision copy guard. With TVs that are not compatible with the DVD-2930CI, the picture may be affected. In this case, set "COMPONENT VIDEO OUT" at "VIDEO SETUP" to "INTERLACED".
- For TVs not compatible with the progressive mode, set "COMPONENT VIDEO OUT" at "VIDEO SETUP" to "INTERLACED".


**NOTE:**

- Connect the DVD-2930CI's video output either directly to the TV or indirectly via an AV amplifier. Do not connect it via a VCR (video cassette recorder). Some discs include copy prohibit signals. If such discs are played via a VCR, the copy guard system may disturb the picture.

Connections


Digital connection to an AV amplifier with built-in decoder

When playing DVDs recorded in Dolby Digital or DTS, the Dolby Digital or DTS bitstream is output from the DVD-2930CI's digital audio output terminal. By connecting the DVD-2930CI to an AV amplifier equipped with a built-in Dolby Digital or DTS decoder you can achieve sound with a power and sense of presence like that of a movie theater or concert hall.

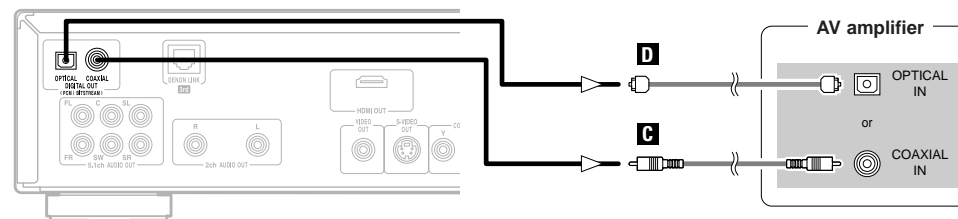

**NOTE:**

- Playing a DVD recorded in DTS when connected to an AV amplifier (decoder) that is not DTS compatible could result in noise that is unpleasant on the ears and could damage the speakers.

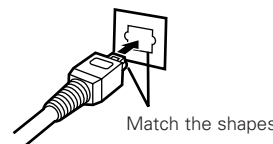

- When using an optical fiber cable (commercially available), insert its plug fully in the proper direction.

## Connections

☐ Audio signals output from the DVD-2930CI's digital audio output terminals

Bitstream output			
Disc type	Audio recording format	With "DIGITAL OUTPUT" as initial setting	
		NORMAL	PCM
DVD-Video	Dolby Digital	Dolby Digital bitstream	2-channel PCM (48 kHz / 16 bit)
	DTS	DTS bitstream	

PCM output					
Disc type	Audio recording format		With “DOWN SAMPLING” as initial setting		
			OFF		ON
			With copyright protection	Without copyright protection	
DVD-Video	Linear PCM	48 kHz / 16 ~ 24 bit	No output *1	48 kHz / 16 ~ 24 bit PCM	48 kHz / 16 bit PCM
		96 kHz / 16 ~ 24 bit	No output	96 kHz / 16 ~ 24 bit PCM	
DVD-Audio	Linear PCM or Packed PCM	44.1/88.2/176.4 kHz / 16 ~ 24 bit	No output *2	44.1/88.2 kHz / 16 ~ 24 bit *3	44.1 kHz / 16 bit PCM
		48/96/192 kHz / 16 ~ 24bit	No output *1	48/96 kHz / 16 ~ 24bit *3	48 kHz / 16 bit PCM
Video CD	MPEG1		44.1 kHz / 16 bit PCM		44.1 kHz / 16 bit PCM
Music CD	44.1 kHz / 16 bit Linear PCM				
MP3 CD	MP3 (MPEG-1 Audio Layer 3)		32/44.1/48 kHz / 16 bit PCM		44.1/48 kHz / 16 bit PCM
WMA CD	WMA (Windows Media Audio)				
Super audio CD	DSD (Direct Stream Digital)		No output *4		No output *4

\*1 : Only 48 kHz/16 bit sources output

\*2 : Only 44.1 kHz/16 bit sources output

\*3 : 176.4 kHz/192 kHz signals are converted to 88.2 kHz/96 kHz respectively.

\*4 : When playing the CD layer, 44.1 kHz/16 bit linear PCM signal output


**Bitstream:**

These are signals that have been compressed and converted to digital. Depending on the decoder, they are decoded for example into 5.1-channel multi-channel audio signals.

**Linear PCM (LPCM):**

These are audio signals that have been converted to digital without being compressed (the signal recording format used for music CDs). While music CDs are recorded in 44.1 kHz/16 bit format, DVDs are recorded in anything between 44.1 kHz/16 bit and 192 kHz/24 bit format, so they generally offer higher sound quality than music CDs.


**Packed PCM (PPCM):**

These are compressed PCM signals providing high sound quality with virtually no data loss when restored to the original signals.

- When a DVD source containing PCM signals recorded in multi-channel is played, the signals are down-mixed to the 2-channels for output (the DVD-2930CI's "D.MIX" indicator lights). For sources for which down-mixing is prohibited, only the FL and FR channels are output.

## Connections


## Connection to a device with 2-channels of analog audio inputs

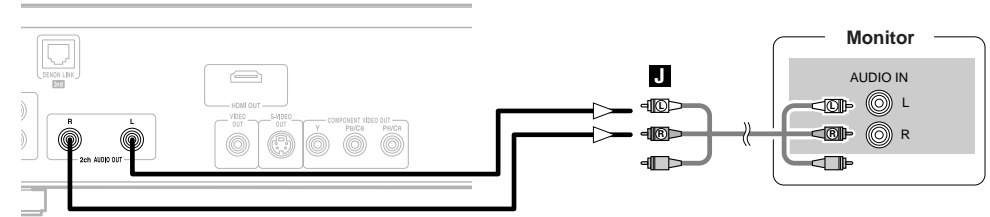**NOTE:**

- When connecting to a 2-channel audio stereo device, use the "2ch AUDIO OUT" terminals. If the "5.1ch AUDIO OUT FL/FR" terminals are used, set "AUDIO SETUP" in "initial settings" to "2CH (VSS OFF)", "2CH (VSS1 ON)" or "2CH (VSS2 ON)" (page 22). For software recorded in multi-channel, analog signals that have been down-mixed into two channels are output. (For sources for which down-mixing is prohibited, only the FL/FR signals are output.)

## Surround connections to a device with 5.1-channels of analog audio inputs

The multi-channel audio signals of Super Audio CDs and multi-channel audio signals recorded in packed PCM format can be played.

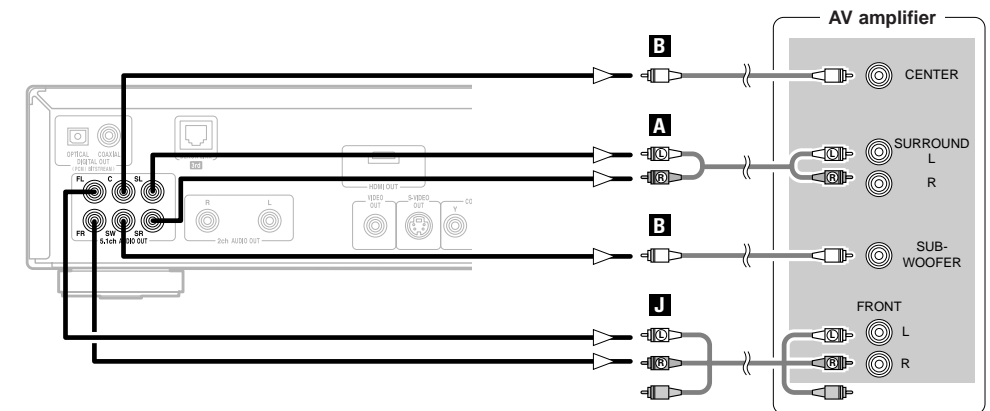


- To achieve high quality analog sound, we recommend setting "DIGITAL OUTPUT" to "OFF" for the "PURE DIRECT MODE" setting (page 28). (This minimizes influence from the digital output circuitry.)

Connections

DENON LINK connections

When connected to a DENON LINK-compatible AV amplifier, the multi-channel signals of DVD-Audio discs, Super Audio CDs, etc., can be transferred as such in digital format.

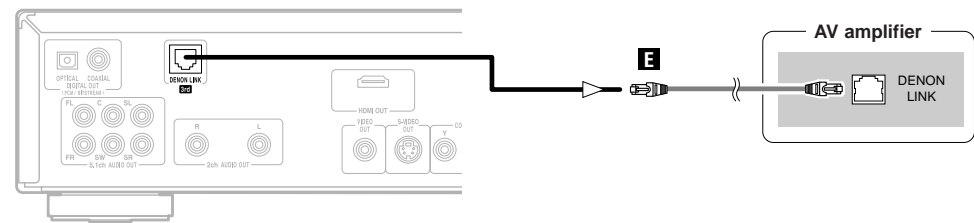


- Digital transfer is possible up to 24 bit/2ch for 192/176.4 kHz, 24 bit/6ch for 96 kHz or less.
- When making DENON LINK connections, be sure to check the version of the AV amplifier to be connected then make the “DENON LINK” setting at “initial settings” appropriately ( page 19). If two DENON LINK terminals of different versions are interconnected, there may be no sound or only noise.
- When “DENON LINK” is set, downmixed audio signals are output from the DVD-2930CI’s analog audio output terminals (L/R and FL/FR). When using the 5.1-channel analog audio terminals, set the “DENON LINK” setting in the initial settings to “OFF”.
- The DVD-2930CI’s speaker settings are invalidated when the DENON LINK terminal is connected. (Make the speaker settings on the AV amplifier to which the DVD-2930CI is connected.)
- When the DENON LINK 2nd connection, Super Audio CD’s signals are not output from the DENON LINK terminal. Please use the analog audio output terminals.

Connection to a device with an HDMI terminal

Connecting the DVD-2930CI to device with an HDMI terminal using an HDMI cable (sold separately) enables digital transfer of both digital video signals and multi-channel audio signals.

☐ For a TV, amplifier, etc.

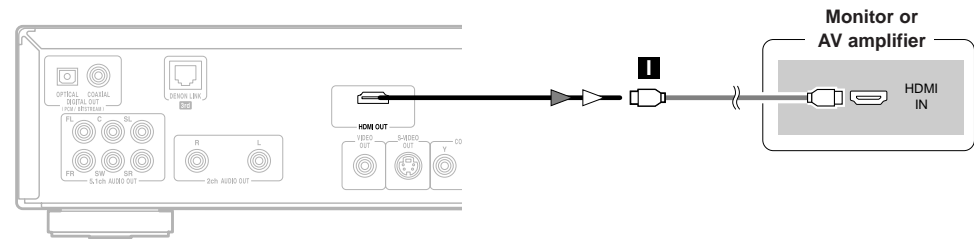

Connections

☐ Audio setting of device to be connected with an HDMI terminal ( page 17)

Device to be connected	HDMI audio setting	
Device compatible with 2-channel audio input or device not compatible with audio input	2CH	The multi-channel audio signals are output from the analog audio output and DENON LINK terminal. Down-mixed 2-channel audio signals are output from the HDMI output terminal.
Device compatible with DTS or Dolby Digital decoding	MULTI (NORMAL)	The DTS or Dolby Digital signals can be decoded by the connected TV or AV amplifier. (The HDMI audio speaker setting, etc., cannot be made.)
Device compatible with 3 or more channels of audio inputs (not DTS or Dolby Digital compatible)	MULTI (LPCM)	Multi-channel audio signals are output from the HDMI terminal. The HDMI audio speaker setting, etc., can be made.

Disc type	Audio recording format	HDMI audio		
		2CH	MULTI (NORMAL)	MULTI (LPCM)
DVD-Video	Dolby Digital	2-channel PCM	Dolby Digital	Multi PCM
	DTS	2-channel PCM	DTS	Multi PCM
	PCM	2-channel PCM	Multi PCM	Multi PCM
DVD-Audio	LPCM or PPCM	2-channel PCM	Multi PCM	Multi PCM
Video CD		2-channel PCM	2-channel PCM	2-channel PCM
Music CD		2-channel PCM	2-channel PCM	2-channel PCM
MP3 CD		2-channel PCM	2-channel PCM	2-channel PCM
WMA CD		2-channel PCM	2-channel PCM	2-channel PCM
Super audio CD	Multi area	No output	No output	No output
	Stereo area	No output	No output	No output
	CD layer	2-channel PCM	2-channel PCM	2-channel PCM

☐ Connection with an HDMI/DVI-D conversion cable (adapter)

- HDMI video streams (video signals) are compatible with DVI-D.  
The DVD-2930CI can be connected to a TV with a DVI-D terminal using an HDMI/DVI-D conversion cable (adapter), but depending on the combination of devices in some cases no picture will be output.
- When using an HDMI/DVI-D conversion adapter, the picture may not be output properly due to poor contact with the connected cable.

Status of signal from the DVD-2930CI’s HDMI output terminal	HDMI-compatible monitor	DVI-D-compatible monitor (HDCP compatible)	DVI-D-compatible monitor (Not HDCP compatible)
	Both video and audio signals output	Only video signals output *	Neither video nor audio signals output

\* The video signals are only output in RGB format.

## Connections

### NOTE:

- The audio signals of the multi and stereo areas of Super Audio CDs are not HDMI output.
- DVD-Audio discs that are copyright protected by CPPM can only be played on devices that are mutually compatible with HDMI Ver. 1.1. (The DVD-2930CI is compatible with HDMI Ver. 1.1.)
- Some HDMI compatible devices can be used to control other devices via the HDMI terminal, but the DVD-2930CI cannot be controlled via the HDMI terminal by other devices.
- The audio signals from the HDMI terminal (sampling frequency, bit length, etc.) may be restricted by the connected device.
- Set the DVD-2930CI's resolution according to the resolutions with which the connected TV or monitor are compatible.
- Use a cable including the HDMI logo (HDMI certified product) for connection of the HDMI terminal. Normal playback may not be possible if a cable that does not include the HDMI logo (non-HDMI-certified product) is used.

## Copyright protection system

In order to play the digital video and audio signals of DVD-Video and DVD-Audio discs using HDMI connections, both the player and the TV, AV amplifier, etc., must be compatible with a copyright protection system called "HDCP" (High-bandwidth Digital Content Protection system). HDCP is a copyright protection technology consisting of data encrypting and authentication of the connected device.

The DVD-2930CI is HDCP compatible.


When a device that is not compatible with HDCP is connected, video signals will not be output normally. For information on your TV, AV amplifier, etc., refer to its operating instructions.

## Connections


### Digital connection to a recording device (MD recorder, etc.)

At "AUDIO SETUP", set "DIGITAL OUTPUT" to "PCM" (page 23), "DOWN SAMPLING" to "ON" (page 23).

Playing a DVD without first making the correct settings could result in noise that is unpleasant on the ears and could damage the speakers.

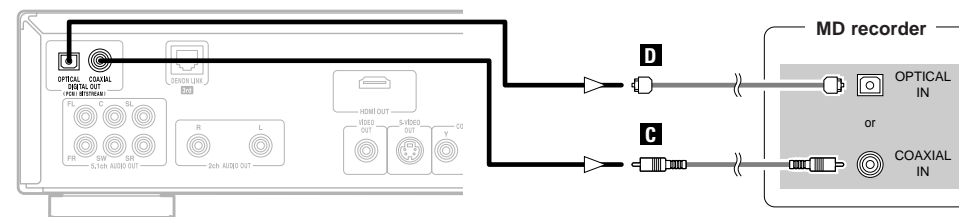

### Connecting the power supply cord

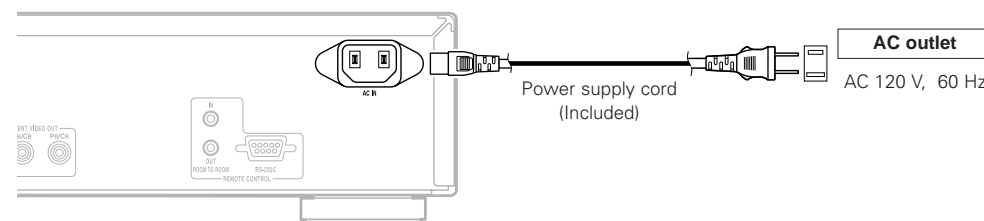

### NOTE:

- Insert the plugs securely. Incomplete connections will result in the generation of noise.

# Making the initial settings

**Table of initial settings**

Aa

LANGUAGE SETUP

DIALOG

ENGLISH

SUBTITLE

OFF

DISC MENUS

ENGLISH

OSD LANGUAGE

ENGLISH

EXIT:SETUP/RETURN

SELECT: ▲▼◀▶

SET:ENTER

Aa

DIGITAL INTERFACE SETUP

HDMI RGB SETTING

NORMAL

HDMI AUDIO SETUP

2CH

HDMI AUTO FORMAT

PANEL RES.

DENON LINK

OFF

EXIT:SETUP/RETURN

SELECT: ▲▼◀▶

SET:ENTER

Aa

VIDEO SETUP

TV ASPECT

WIDE(16:9)

TV TYPE

MULTI

COMPONENT VIDEO OUT

PROGRESSIVE

AUDIO/VIDEO SYNC

PROGRESSIVE

SQUEEZE MODE

OFF

PROGRESSIVE MODE

AUTO

PIXEL CROPPING

OFF

EXIT:SETUP/RETURN

SELECT: ▲▼◀▶

SET:ENTER

Aa

LANGUAGE SETUP

DIALOG

ENGLISH

SUBTITLE

OFF

DISC MENUS

ENGLISH

OSD LANGUAGE

ENGLISH

EXIT:SETUP/RETURN

SELECT: ▲▼◀▶

SET:ENTER

Aa

DIGITAL INTERFACE SETUP

HDMI RGB SETTING

NORMAL

HDMI AUDIO SETUP

2CH

HDMI AUTO FORMAT

PANEL RES.

DENON LINK

OFF

EXIT:SETUP/RETURN

SELECT: ▲▼◀▶

SET:ENTER

Aa

VIDEO SETUP

TV ASPECT

WIDE(16:9)

TV TYPE

MULTI

COMPONENT VIDEO OUT

PROGRESSIVE

AUDIO/VIDEO SYNC

PROGRESSIVE

SQUEEZE MODE

OFF

PROGRESSIVE MODE

AUTO

PIXEL CROPPING

OFF

EXIT:SETUP/RETURN

SELECT: ▲▼◀▶

SET:ENTER

Description		Item you want to set (* indicates the setting upon purchase)							Page
DIALOG	Set the audio language to be output.	ENGLISH*	FRENCH	SPANISH	GERMAN	JAPANESE	OTHERS	16	
SUB TITLE	Sets the language of the subtitles displayed on the TV screen.	OFF*	ENGLISH	FRENCH	SPANISH	GERMAN	JAPANESE	OTHERS	16
DISC MENUS	Sets the language of the menus (top menu, etc.), recorded on the disc.	ENGLISH*	FRENCH	SPANISH	GERMAN	JAPANESE	OTHERS	16	
OSD LANGUAGE	Sets the language of the initial settings screen and the messages displayed on the TV screen ("PLAY", etc.).	ENGLISH*		FRANÇAIS		ESPAÑOL		16	


Description		Item you want to set (* indicates the setting upon purchase)							Page		
HDMI RGB SETTING	Use this procedure to set the digital RGB image range (data range) output from the HDMI terminal.	NORMAL*				ENHANCED			17		
HDMI AUDIO SETUP (Can only be set when "MULTI (LPCM)" is selected)	SPEAKER CONFIGURATION	2CH*		MULTI (NORMAL)		MULTI (LPCM)			17		
		FRONT SP	CENTER SP	SUBWOOFER	SURROUND SP	CROSSOVER			17, 18		
	LARGE* / SMALL	LARGE* / SMALL / (NONE)	YES* / (NO)	LARGE* / SMALL / (NONE)	40 / 60 / 80* / 100 / 120Hz						
	CHANNEL LEVEL	TEST TONE	FRONT LCH	CENTER	FRONT RCH	SURROUND RCH	SURROUND LCH	SUBWOOFER	18		
		OFF / AUTO / MANUAL	0 ~ -10dB (0dB*)								
	DELAY TIME	This is a parameter for optimizing the timing at which the sound is output from the speakers and subwoofer according to their distance from the listening position.	DISTANCE	FRONT LCH	FRONT RCH	CENTER	SURROUND LCH	SURROUND RCH	SUBWOOFER	DEFAULT	19
			METERS / FEET*	0 ~ 60ft (12ft*) (0 ~ 18m (3.6m*))		0 ~ 60ft (10ft*) (0 ~ 18m (3.0m*))		0 ~ 60ft (12ft*) (0 ~ 18m (3.6m*))		ON	
HDMI AUTO FORMAT	Use this procedure to make the settings for the "AUTO" function selected with the HDMI FORMAT button on the remote control unit.	PANEL RES.*				MAX RES.			19		
DENON LINK	Set the DENON LINK terminal's output according to the DENON LINK version of the connected AV amplifier.	OFF*		2nd			3rd		19		

Description		Item you want to set (* indicates the setting upon purchase)							Page
TV ASPECT	Set this according to the screen of the connected TV.	4:3 PS		4:3 LB		WIDE (16:9)*			20
TV TYPE	Set this according to the video format of the connected TV.	NTSC		PAL		MULTI*			20
COMPONENT VIDEO OUT	Use this procedure to set the DVD-2930CI's component video output format.	PROGRESSIVE*				INTERLACED			20
AUDIO / VIDEO SYNC	Set the video output to synchronize the audio signal.	PROGRESSIVE*	INTERLACED	HDMI		OTHERS	0* ~ 200 msec (Offset time)		21
SQUEEZE MODE	Use this procedure to set the output picture when "WIDE (16:9)" is selected at "TV ASPECT".	OFF*		ON		AUTO			21
PROGRESSIVE MODE	Sets the optimum progressive mode for the image material.	AUTO*		VIDEO1		VIDEO2			21, 22
PIXEL CROPPING	Set the horizontal display range with respect to the interlaced output.	OFF*				ON			22



## Making the initial settings


## Audio settings

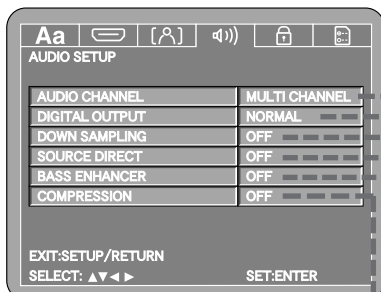

Description				Item you want to set (* indicates the setting upon purchase)										Page
AUDIO CHANNEL	Set the audio output.			MULTI CHANNEL*		2CH (VSS OFF)		2CH (VSS1 ON)		2CH (VSS2 ON)		22		
	SPEAKER SETUP	SPEAKER CONFIGURATION	The properties and components of the different channels are set automatically for the combination of speakers being used.	FRONT SP	CENTER SP		SUBWOOFER		SURROUND SP		CROSSOVER		22	
				LARGE* / SMALL	LARGE* / SMALL / NONE		YES* / NO		LARGE* / SMALL / NONE		40 / 60 / 80* / 100 / 120Hz			
		CHANNEL LEVEL	Set the volume of the different speakers so that the volume of the test tones output from them sounds the same.	TEST TONE	FRONT LCH	CENTER	FRONT RCH	SURROUND RCH	SURROUND LCH	SUBWOOFER	SW +10dB	22		
				OFF / AUTO / MANUAL	0 ~ -10dB (0dB*)								OFF* / ON	
		DELAY TIME	This is a parameter for optimizing the timing at which the sound is output from the speakers and subwoofer according to their distance from the listening position.	DISTANCE	FRONT LCH	FRONT RCH	CENTER	SURROUND LCH	SURROUND RCH	SUBWOOFER	DEFAULT	22		
				METERS / FEET*	0 ~ 60ft (12ft*) (0 ~ 18m (3.6m*))			0 ~ 60ft (10ft*) (0 ~ 18m (3.0m*))		0 ~ 60ft (12ft*) (0 ~ 18m (3.6m*))			ON	
DIGITAL OUTPUT	Use this procedure to set the signal format of the digital audio output.			NORMAL*					PCM			23		
DOWN SAMPLING	Use this procedure to set the digital audio output when playing DVDs recorded in linear PCM or packed PCM.			OFF*					ON			23		
SOURCE DIRECT	Use this procedure to making the setting for direct audio output of the disc's data without making the "SPEAKER SETUP" settings at "AUDIO CHANNEL".			OFF*			50kHz			100kHz		23, 24		
BASS ENHANCER	Sets the subwoofer output for when playing 2-channel or other sources without LFE signals.			OFF*					ON			24		
COMPRESSION	Use this procedure to set the dynamic range of the output signals when playing DVDs recorded in Dolby Digital.			OFF*					ON			24		


## Making the initial settings

## Viewing restriction setting

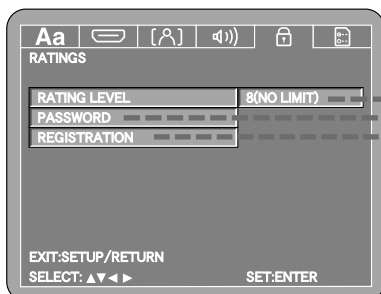



Description		Item you want to set (* indicates the setting upon purchase)										Page
RATING LEVEL	A password can be set to restrict (prohibit) the playing of adult DVDs so that children or others cannot view them.	0 (LOCK ALL)	1	2	3	4	5	6	7	8 (NO LIMIT)*	25	
PASSWORD	Use this procedure to change the password for the "RATING LEVEL".	CHANGE									25	
REGISTRATION	Use this procedure to display the registration code for leasing or purchasing DivX® VOD format video files using the DivX® VOD (Video On Demand) service.	SHOW CODE									26	

## Special settings

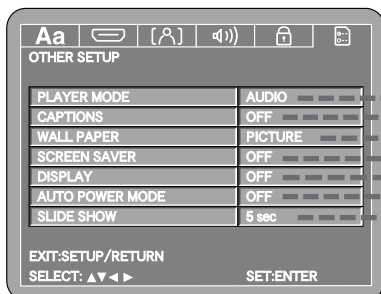

Description		Item you want to set (* indicates the setting upon purchase)				Page
▶ <b>PLAYER MODE</b>	Set the playback mode for playing the DVD-Video contents recorded on DVD-Audio discs.	AUDIO*		VIDEO		26
▶ <b>CAPTIONS</b>	Use this procedure to set the output of the closed caption signals to display captions using a caption decoder (commercially available).	OFF*		ON		26
▶ <b>WALL PAPER</b>	Use this procedure to set the picture to be displayed on the TV screen when in the stop mode or when playing CDs.	PICTURE*	BLACK	GRAY	BLUE	26
▶ <b>SCREEN SAVER</b>	The screensaver functions protects the TV screen from imprinting.	OFF*		ON		27
▶ <b>DISPLAY</b>	If the display is turned off with the pure direct or dimmer function, a description of operations can be displayed for about 2 seconds.	OFF*		ON		27
▶ <b>AUTO POWER MODE</b>	This function automatically sets the player's power to the standby mode if the player is left in the stop mode for about 30 minutes.	OFF*		ON		27
▶ <b>SLIDE SHOW</b>	Use this procedure to set the time after which the still picture (in JPEG format) switches when playing still pictures.	5 ~ 15 sec (5 sec*)				27

## Making the initial settings

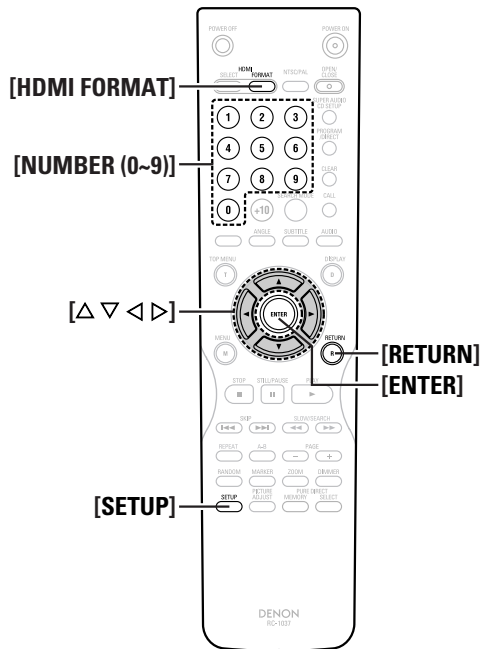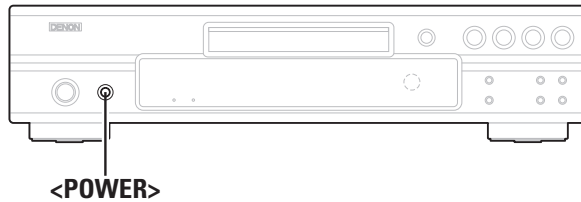

### About the button names in this explanation

< > : Buttons on the main unit

[ ] : Buttons on the remote control unit

Button name only :

Buttons on the main unit and remote control unit

## Operations for making the initial settings

Before starting playback, make the initial settings according to your usage conditions.

**1** Check that all the connections are proper.

**2** Turn on the TV's power and switch its video input so that the DVD-2930CI's image can be seen.

**3** Press <POWER>.

■ ON: The power indicator lights green.

■ OFF: The power indicator turns off.

**4** Press [SETUP].

- The initial settings screen is displayed.

**5** Use [◀ ▶] to select the item to be set.

**6** Use [Δ ∇] to select the item to be set, then press [ENTER].


**7** Use [Δ ∇] again to select the item to be set, then press [ENTER].

**8** Once the settings are completed, press [SETUP].



- The initial settings are stored in the memory and remain in effect until they are changed, even if the power is turned off.
- Some of the items can be changed while a disc is playing.

## Making the initial settings

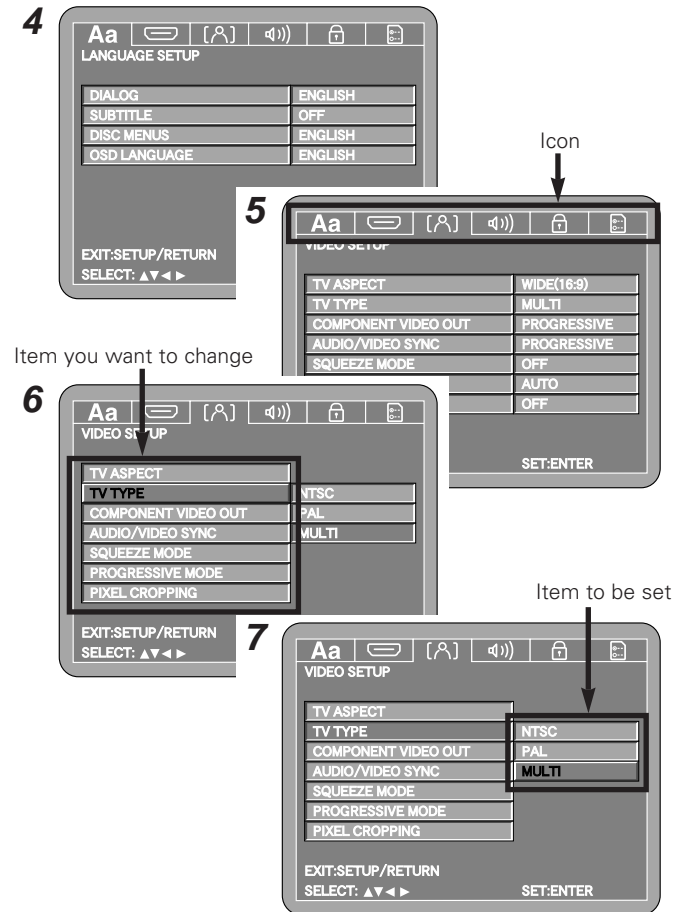

## Making the initial settings

## Language setting ( [Aa] )

Use [◀ ▶] to select “ [Aa] ”.

**1** Use [△ ▽] to select the item to be set, then press [ENTER].

**DIALOG:**

Set the audio language to be output.

**SUBTITLE:**

Sets the language of the subtitles displayed on the TV screen.


**DISC MENUS:**

Sets the language of the menus (top menu, etc.), recorded on the disc.

**OSD LANGUAGE:**

Sets the language of the initial settings screen and the messages displayed on the TV screen (“PLAY”, etc.).

**2** Use [△ ▽] to select the language to be set, then press [ENTER].

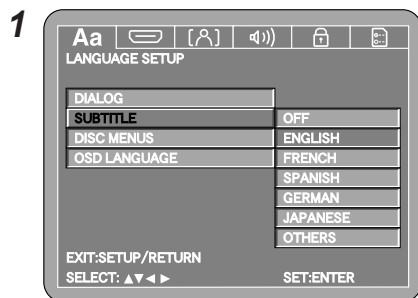

(Select “ENGLISH” under “SUBTITLE”)



- If “OTHERS” is selected, refer to the “Language code list”, and use [NUMBER] (0 ~ 9) to input the code number.
- If you do not want to display the subtitles, select “OFF” at “SUBTITLE”. For some discs it is not possible to turn off the subtitles.

## Making the initial settings

## Language code list

Code	Language	Code	Language	Code	Language	Code	Language
4747	Afar	5271	Frisian	5868	Latvian; Lettish	6558	Slovenian
4748	Abkhazian	5347	Irish	5953	Malagasy	6559	Samoan
4752	Afrikaans	5350	Gaelic (Scotland)	5955	Maori	6560	Shona
4759	Ameharic	5358	Galician	5957	Macedonish	6561	Somali
4764	Arabic	5360	Guarani	5958	Malayalam	6563	Albanian
4765	Assamese	5367	Gujarati	5960	Mongolian	6564	Serbian
4771	Aymara	5447	Hausa	5961	Moldavian	6565	Siswati
4772	Azerbaijani	5455	Hindi	5964	Marathi	6566	Sesotho
4847	Bashkir	5464	Croatian	5965	Malay	6567	Sundanese
4851	Byelorussian	5467	Hungarian	5966	Maltese	6568	Swedish
4853	Bulgarian	5471	Armenian	5971	Burmese	6569	Swahili
4854	Bihari	5547	International language	6047	Nauru	6647	Tamil
4855	Bislama	5551	International language	6051	Nepali	6651	Telugu
4860	Bengali; Bangla	5557	Inupik	6058	Dutch	6653	Tajik
4861	Tibetan	5560	Indonesian	6061	Norwegian	6654	Thai
4864	Breton	5565	Icelandic	6149	Provençal	6655	Tigrinya
4947	Catalan	5566	Italian	6159	Oromo	6657	Turkmen
4961	Corsican	5569	Hebrew	6164	Oriya	6658	Tagalog
4965	Czech	5647	Japanese	6247	Panjabi	6660	Setswana
4971	Welsh	5655	Yiddish	6258	Polish	6661	Tonga
5047	Danish	5669	Javanese	6265	Pashto; Pushto	6664	Turkish
5051	German	5747	Georgian	6266	Portuguese	6665	Tsonga
5072	Bhutani	5757	Kazakh	6367	Quechua	6666	Tatar
5158	Greek	5758	Greenlandic	6459	Rhaeto-Romance	6669	Twi
5160	English	5759	Cambodian	6460	Kirundi	6757	Ukrainian
5161	Esperanto	5760	Kannada	6461	Romanian	6764	Urdu
5165	Spanish	5761	Korean	6467	Russian	6772	Uzbek
5166	Estonian	5765	Kashmiri	6469	Kinya-rwanda	6855	Vietnamese
5167	Basque	5767	Kurdish	6547	Sanskrit	6861	Volapük
5247	Persian	5771	Kirghiz	6550	Sindhi	6961	Wolof
5255	Finnish	5847	Latin	6553	Sango	7054	Xhosa
5256	Fiji	5860	Lingala	6554	Serbo-Croatian	7161	Yoruba
5261	Faroese	5861	Laothian	6555	Singhalese	7254	Chinese
5264	French	5866	Lithuanian	6557	Slovak	7267	Zulu

## Making the initial settings

### Digital interface settings ( )

Use [◀ ▶] to select “ ”.

### HDMI RGB picture quality settings

Use this procedure to set the digital RGB image range (data range) output from the HDMI terminal.

**1** Use [△ ▽] to select “HDMI RGB SETTING”, then press [ENTER].

**2** Use [△ ▽] to select the item to be set, then press [ENTER].


#### **NORMAL (Upon purchase):**

Output as “16 (black)” to “235 (white)”.

#### **ENHANCED:**

Output as “0 (black)” to “246 (white)”.

※ Depending on the TV you are using, the black colors may seem to stand out when using HDMI connections. If so, set to “ENHANCED”.

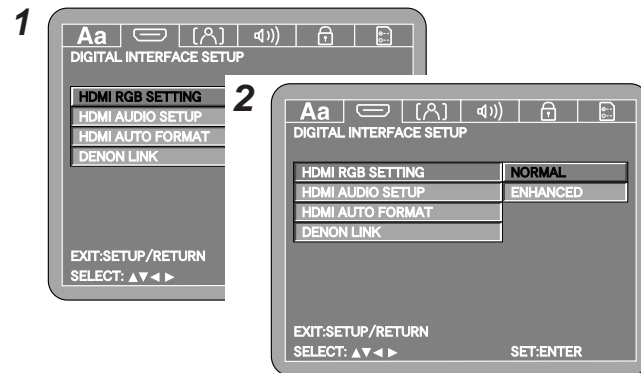

• No effect when the HDMI terminal's video setting is set to “YCbCr” ( page 29).

### HDMI audio

Use this procedure to set the audio signals output from the HDMI terminal.

**1** Use [△ ▽] to select “HDMI AUDIO SETUP”, then press [ENTER].

**2** Use [△ ▽] to select the item to be set, then press [ENTER].

#### **2CH (Upon purchase):**

2-channel linear PCM audio signals are output.

#### **MULTI (NORMAL):**

Multi- (5.1-) channel audio signals are output.

※ Output signal

- Dolby Digital/DTS discs:  
Bitstream signals are output
- Linear PCM / Packed PCM discs:  
Linear PCM signals are output


#### **MULTI (LPCM):**

Multi- (5.1-) channel audio signals are output.

It is also possible to make the “SPEAKER CONFIGURATION”, “CHANNEL LEVEL” and “DELAY TIME” settings ( page 17~19).

※ Output signal

- Dolby Digital/DTS discs:  
Decoded Linear PCM signals output
- Linear PCM / Packed PCM discs:  
Linear PCM signals are output

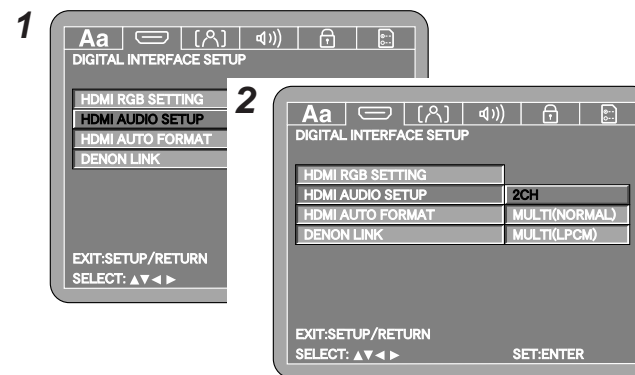

## Making the initial settings

### HDMI speaker settings

At “HDMI AUDIO SETUP”, select “MULTI (LPCM)”. The “HDMI SPEAKER SETUP” screen appears. Make the “SPEAKER CONFIGURATION”, “CHANNEL LEVEL” and “DELAY TIME” settings.

#### ☐ **Speaker settings**

The properties and components of the different channels are set automatically for the combination of speakers being used.

**1** Use [△ ▽] to select “MULTI (LPCM)”, then press [ENTER].

**2** Use [△ ▽] to select “SPEAKER CONFIGURATION”, then press [ENTER].

**3** Use [△ ▽] to select the speaker, then press [ENTER].

**4** Use [△ ▽] to select the speaker type, then press [ENTER].

#### **LARGE (Upon purchase), SMALL:**

Select “LARGE” if you have connected large speakers with strong low frequency reproduction capabilities, “SMALL” if you have connected small speakers that do not provide strong bass sound.

#### **HDMI SPEAKER SETUP:**

It is not possible to select “NO” for the HDMI speaker setting.

#### **CROSSOVER:**

For speakers set to “SMALL”, the sound with frequencies below that of the crossover frequency are cut. This bass sound that has been cut is output from the subwoofer or a speaker for which “LARGE” is set.

#### • **40, 60, 80 (Upon purchase), 100, 120Hz:**

Select according to the low frequency reproduction capabilities of the connected speaker.

## Making the initial settings

**1**

**2**

**3**

**4**

EXIT:SETUP/RETURN  
SELECT: ▲▼◀▶

SET:ENTER

※ The display differs depending on the connected speaker.



- To return to the setting screen:  
Press **[RETURN]**.

### Channel level

Set the volume of the different speakers so that the test tones output from them sound to have the same volume.

**1** At the HDMI speaker setting screen, use **[△ ▽]** to select “CHANNEL LEVEL”, then press **[ENTER]**.

**2** Use **[△ ▽]** to select “TEST TONE”, use **[◀ ▶]** again to make the settings, then press **[ENTER]**.

#### OFF:

No test tones are output.

#### AUTO:

Adjust the volumes while listening to the test tones output automatically from the different speakers.

 
#### MANUAL:

Switch the speaker from which the test tone is output manually as you adjust the volumes.

**3** If “AUTO” is selected:

**-1** Use **[◀ ▶]** to adjust the volume.

- The volume can be adjusted between the range of 0 to -10 dB.
- The test tones are output automatically in the order shown below.



**3** If “MANUAL” is selected:

**-2** Use **[△ ▽]** to select the speaker, use **[◀ ▶]** to adjust the volume, then press **[ENTER]**.

## Making the initial settings

**1**

**2**

**3**

**3 -1**

**3 -2**

EXIT:SETUP/RETURN  
SELECT: ▲▼◀▶

SET:ENTER



- To return to the setting screen:  
Press **[RETURN]**.


Making the initial settings

Delay time

This is a parameter for optimizing the timing at which the sound is output from the speakers and subwoofer according to their distance from the listening position.

- 1 At the HDMI speaker setting screen, use [Δ ▽] to select “DELAY TIME”, then press [ENTER].
- 2 Use [Δ ▽] to select “DISTANCE”, use [◀ ▶] to set “METERS” or “FEET”.
- 3 Use [Δ ▽] to select the speaker, then use [◀ ▶] to set the distance.
  - The distance can be set between the range of 0 to 60 feet (0 to 18 meters).

※ If you select “DEFAULT” and press [ENTER], the delay time settings are restored to the values set when you purchased the player.

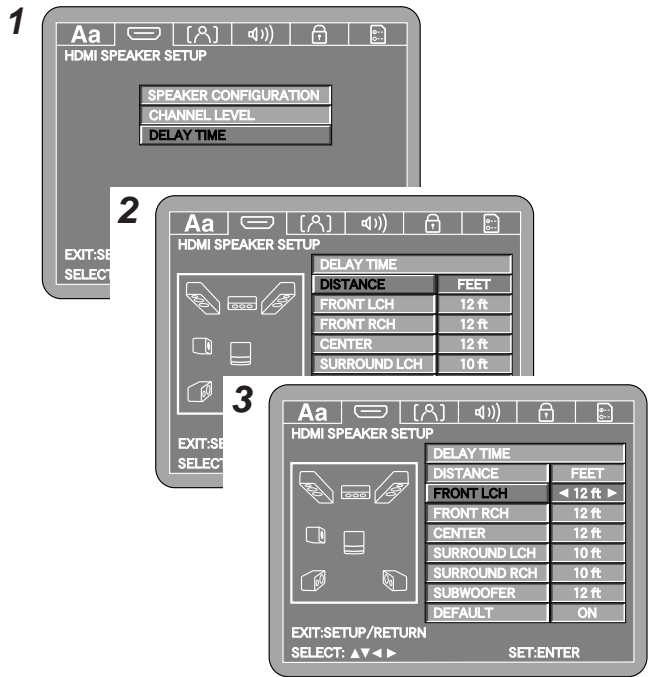

- Set the difference between the distances for the different speakers to no more than 15 feet (4.5 meters).
- To return to the setting screen: Press [RETURN].


HDMI auto format

Use this procedure to make the settings for the “AUTO” function selected with [HDMI FORMAT] (page 29).

- 1 Use [Δ ▽] to select “HDMI AUTO FORMAT”, then press [ENTER].
- 2 Use [Δ ▽] to select the item to be set, then press [ENTER].

**PANEL RES. (Upon purchase):**  
The number of pixels of the connected HDMI device’s panel is detected and the HDMI output resolution is selected automatically.

**MAX RES.:**  
The maximum resolution that can be input to the connected HDMI device is detected and the HDMI output resolution is selected automatically.

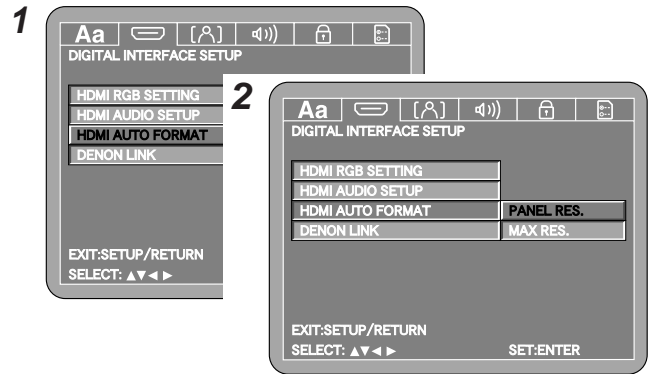

Making the initial settings


DENON LINK

Set the DENON LINK terminal’s output according to the DENON LINK version of the connected AV amplifier.

- 1 Use [Δ ▽] to select “DENON LINK”, then press [ENTER].
- 2 Use [Δ ▽] to select the item to be set, then press [ENTER].
- OFF (Upon purchase):**  
No digital audio signals are output from the DENON LINK terminal. Select this when not connecting the DENON LINK terminal.

**2nd:**  
The signals are output in DENON LINK 2nd Edition format. The following digital audio signals can be transferred: DVD-Audio, DVD-Video, music CD and video CD signals

**3rd:**  
The signals are output in DENON LINK 3rd Edition format. The following digital audio signals can be transferred: Super Audio CD, DVD-Audio, DVD-Video, music CD and video CD signals

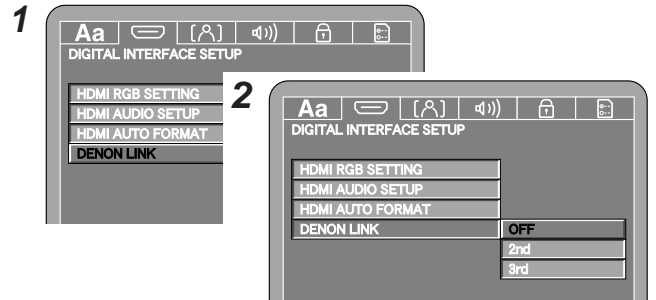

- The DENON LINK setting with respect to the DENON LINK version of the connected AV amplifier is as shown below.

AV amplifier’s DENON LINK version	DENON LINK setting
2nd Edition (“S.E.” is indicated near the terminal)	“2nd”
3rd Edition (“3rd” is indicated near the terminal)	“3rd” (or 2nd)

Making the initial settings

Video setting ([F8])

Use [◀ ▶] to select “ [F8] ”.

TV aspect ratio

Set this according to the screen of the connected TV.


**1** Use [△ ▽] to select “TV ASPECT”, then press [ENTER].

**2** Use [△ ▽] to select the item to be set, then press [ENTER].

**4:3 PS:**  
Select this if the screen’s vertical:horizontal ratio is 4:3.  
Software recorded in wide screen format is played in the pan & scan mode (with the left and right sides of the screen cut. Software for which pan & scan is not specified, however, is played in the letter box mode (with black bands at the top and bottom of the screen).

**4:3 LB:**  
Select this if the screen’s vertical:horizontal ratio is 4:3.  
Software recorded in wide screen format is played in the letter box mode.

**WIDE (16:9) (Upon purchase):**  
Select this when a wide-screen TV is connected.  
Software recorded in wide screen format is played over the entire screen.

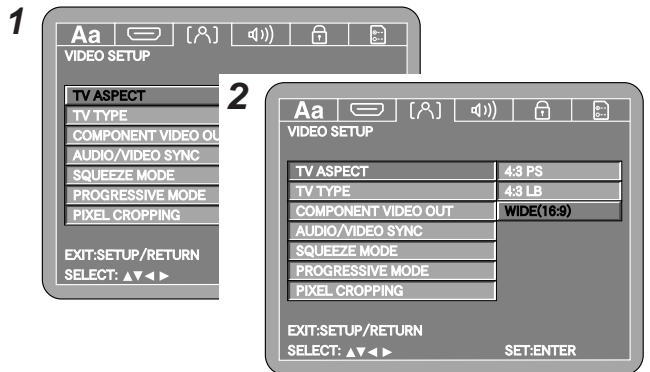

TV type

Set this according to the video format of the connected TV.


**1** Use [△ ▽] to select “TV TYPE”, then press [ENTER].

**2** Use [△ ▽] to select the item to be set, then press [ENTER].

**NTSC:**  
Select this if the connected TV is of the NTSC type.

**PAL:**  
Select this if the connected TV is of the PAL type.

**MULTI (Upon purchase):**  
Select this if the connected TV is of both the NTSC and PAL types.

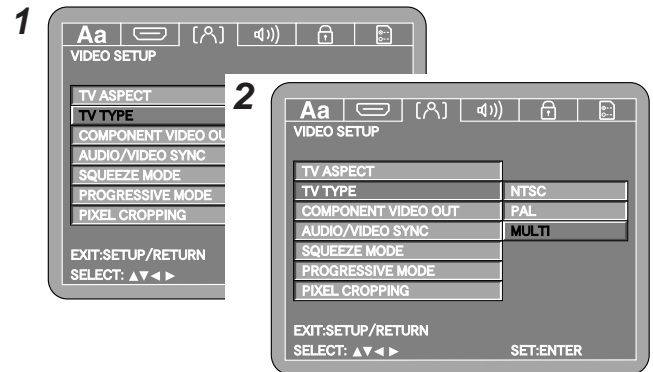

- The picture will not be displayed properly if a video format different from the connected TV’s type is set.

Making the initial settings

Component video output


Use this procedure to set the DVD-2930CI’s component video output format.

**1** Use [△ ▽] to select “COMPONENT VIDEO OUT”, then press [ENTER].

**2** Use [△ ▽] to select the item to be set, then press [ENTER].

**PROGRESSIVE (Upon purchase):**  
Sets to the progressive format.  
In this format there is less flickering than with the interlaced format.

**INTERLACED:**  
Sets to the interlaced format.

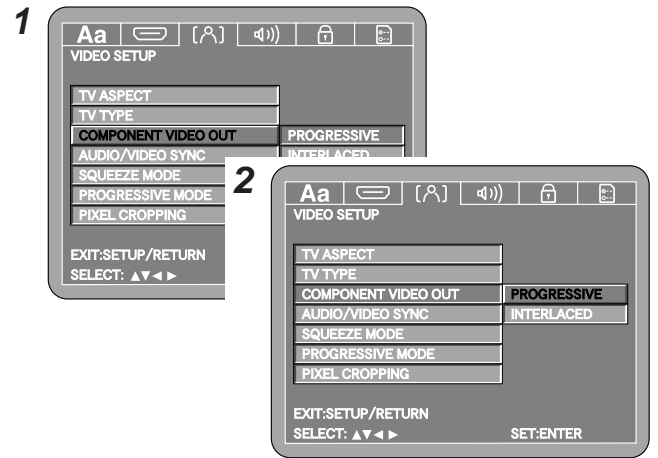

- When outputting video signals from the HDMI terminal, the video signals output from the component video terminals are interlaced.



## Making the initial settings

## AV Synchronized

Set the video output to synchronize the audio signal.

**1** Use [ $\Delta$   $\nabla$ ] to select “AUDIO/VIDEO SYNC”, then press [ENTER].

**2** Use [ $\Delta$   $\nabla$ ] to select the item to be set, then press [ENTER].

**PROGRESSIVE (Upon purchase):**

Synchronizes the sound with the progressive mode.

**INTERLACED:**

Synchronizes the sound with the interlaced mode.

**HDMI:**


Synchronizes the sound with the HDMI mode.

**OTHERS:**

Select this when you want to view progressive, interlaced and HDMI pictures simultaneously.

The audio signals are set to the optimum timing for the respective pictures. (They are not synchronized.)

※ To synchronize the audio signals, set to something other than “OTHERS”.

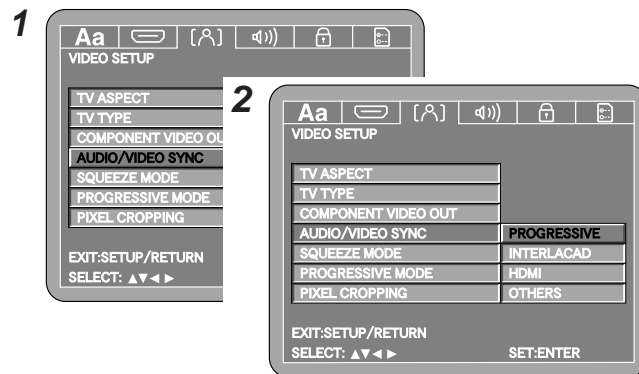


## Offset time

When “AUDIO/VIDEO SYNC” is set, switches to the “offset time” setting screen.

Use [ $\Delta$   $\nabla$ ] to set, then press [ENTER].

- The time can be set between the range of 0 to 200 msec.

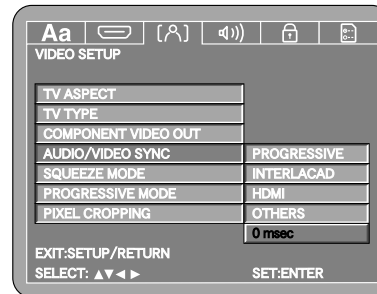

## Squeeze mode

Use this procedure to set the output picture when “WIDE (16:9)” is selected at “TV ASPECT” (page 20).

**1** Use [ $\Delta$   $\nabla$ ] to select “SQUEEZE MODE”, then press [ENTER].

**2** Use [ $\Delta$   $\nabla$ ] to select the item to be set, then press [ENTER].

**OFF (Upon purchase):**

The picture is displayed over the entire 16:9 TV screen, regardless of the original image size.


**ON:**

The picture is displayed in the center of the 16:9 TV screen with a 4:3 aspect ratio, regardless of the original image size.

**AUTO:**

When playing 4:3 images, the picture is displayed in the center of the 16:9 TV screen with a 4:3 aspect ratio.

## Making the initial settings

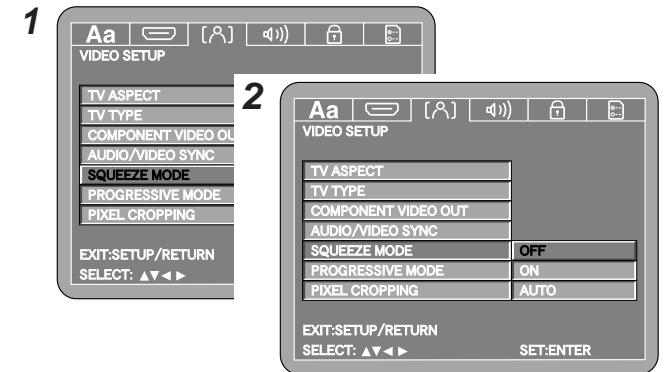

- No effect for interlaced video outputs.

## Progressive mode

Sets the optimum progressive mode for the image material.

**1** Use [ $\Delta$   $\nabla$ ] to select “PROGRESSIVE MODE”, then press [ENTER].

**2** Use [ $\Delta$   $\nabla$ ] to select the item to be set, then press [ENTER].

**AUTO (Upon purchase):**

The material type (film or video) is automatically identified from the disc and the mode is selected automatically.

**VIDEO1:**


This mode is suited for playing video material discs.

**VIDEO2:**

This mode is suited for playing video material discs and 30-frame film material discs.



## Making the initial settings

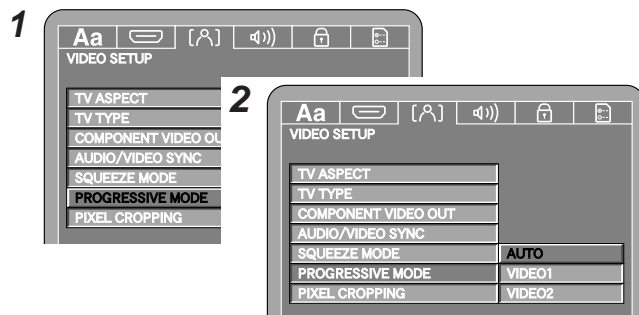

## Horizontal display range

Set the horizontal display range with respect to the interlaced output.

**1** Use [Δ ▽] to select “PIXEL CROPPING”, then press [ENTER].


**2** Use [Δ ▽] to select the item to be set, then press [ENTER].

**OFF (Upon purchase):**

Select this when a regular consumer TV is connected.

**ON:**

When a professional monitor is connected, select this if the image's synchronization is disturbed.

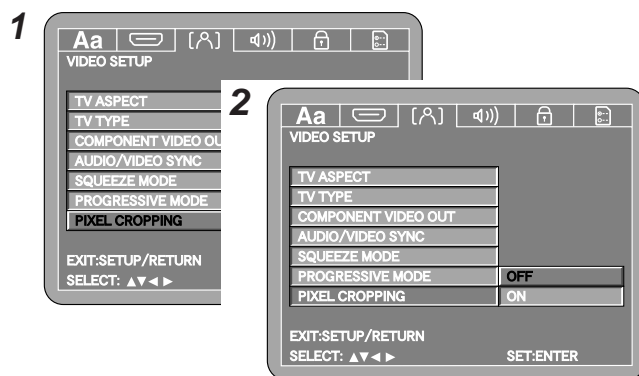

## Audio settings ( )

Use [◀ ▶] to select “ ”.

## Audio channels

Set the audio output.

**1** Use [Δ ▽] to select “AUDIO CHANNEL”, then press [ENTER].

**2** Use [Δ ▽] to select the item to be set, then press [ENTER].

**MULTI CHANNEL (Upon purchase):**

Select this when using 3 or more speakers. The “SPEAKER CONFIGURATION”, “CHANNEL LEVEL” and “DELAY TIME” setting screens appear.

**2CH (VSS OFF):**


Select this when using 2 speakers and a Dolby Pro Logic decoder (Dolby Pro Logic compatible amplifier).

**2CH (VSS1 ON):**

This setting provides a natural surround effect in a system with 2 speakers connected.

**2CH (VSS2 ON):**

This settings provides a stronger surround effect in a system with 2 speakers connected than VSS1.

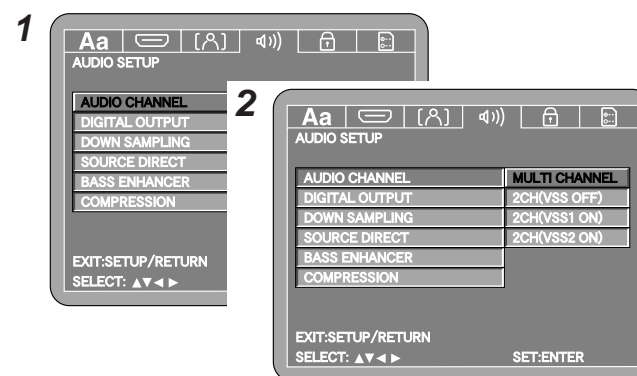

## Making the initial settings



- The procedure for making the “SPEAKER CONFIGURATION”, “CHANNEL LEVEL” and “DELAY TIME” settings is the same as when “MULTI (LPCM)” is selected at “HDMI AUDIO SETUP” (page 17).
- When “ON” is selected for “SW+10dB” at “CHANNEL LEVEL”, the volume of the sound output from the subwoofer can be set 10 dB higher.

☐ **About V.S.S. (Virtual Surround Sound)**

- Using the V.S.S. function lets you enjoy a surround effect with only 2 speakers (left and right).
- This function is only effective for DVDs recorded in Dolby Digital, DTS, MPEG, LPCM with 2 or more channels.
- For some discs the effect may be weak or there may be no effect at all.
- For some discs the sound may be distorted when using this function. If so, set the V.S.S. function to “OFF”.
- Cancel other surround functions (for example, the TV's surround mode) when using this function.
- The effect is stronger if the listening position is approximately 3 to 4 times the distance of the space between the front speakers (or the sideways width of the TV when using the TV's speakers).

## Making the initial settings

## Digital output

Use this procedure to set the signal format of the digital audio output.

**1** Use [ $\Delta$   $\nabla$ ] to select “DIGITAL OUTPUT”, then press [ENTER].

**2** Use [ $\Delta$   $\nabla$ ] to select the item to be set, then press [ENTER].


**NORMAL (Upon purchase):**

Select this when an AV amplifier with built-in Dolby Digital or DTS decoder is connected to the DVD-2930CI's digital audio output terminal.

When playing discs recorded in Dolby Digital or DTS, the corresponding bitstream signals are output.

**PCM:**

When playing discs recorded in Dolby Digital or DTS, the signals are converted to 48 kHz/16 bit PCM (2-channel) before being output.

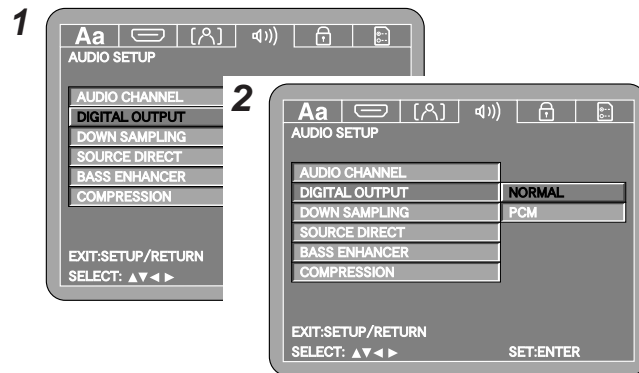

- When playing discs recorded in linear PCM or packed PCM, the signals are output in linear PCM format, regardless of this setting.

## Downsampling

Use this procedure to set the digital audio output when playing DVDs recorded in linear PCM or packed PCM.

**1** Use [ $\Delta$   $\nabla$ ] to select “DOWN SAMPLING”, then press [ENTER].

**2** Use [ $\Delta$   $\nabla$ ] to select the item to be set, then press [ENTER].


**OFF (Upon purchase):**

For DVDs recorded in linear PCM or packed PCM without copyright protection, 2-channel audio signals of up to 96 kHz are output as linear PCM signals with no conversion. (192 kHz and 176.4 kHz signals are converted to 96 kHz and 88.2 kHz, respectively.)

**ON:**

Linear PCM or packed PCM signals are converted to 48 kHz or less for output.

※ Set to “ON” when using digital connections to an AV amplifier that is not compatible with sampling frequencies of 192 kHz, 176.4 kHz, 96 kHz and 88.2 kHz.

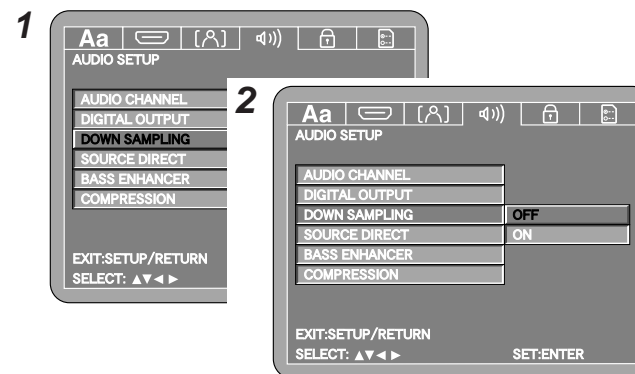

- For DVDs containing multi-channel PCM signals, the signals are down-mixed into the 2-channels and output in digital format. (For sources for which down-mixing is prohibited, only the FL and FR channels are output.)
- When playing linear PCM or packed PCM DVDs with copyright protection, due to considerations for the copyright holder, digital output is not possible for sources of 48 kHz/16 bit or more. To play such sources, either set to “ON”, use DENON LINK or analog connections (page 9, 10).

## Making the initial settings

## Source direct

Use this procedure to making the setting for direct audio output of the disc's data without making the “SPEAKER SETUP” settings at “AUDIO CHANNEL”.

Making this setting allows you to enjoy full-band playback of all channels, as recommended for DTS. (Note that this setting increases the volume of the subwoofer by 5 dB, or 15 dB for Super Audio CDs.) This setting also lets you enjoy playback of 6-channel DVD-Audio sources recorded in full frequency band for all channels.

**1** Use [ $\Delta$   $\nabla$ ] to select “SOURCE DIRECT”, then press [ENTER].

**2** Use [ $\Delta$   $\nabla$ ] to select the item to be set, then press [ENTER].


**OFF (Upon purchase):**

Select this when playing using the “SPEAKER SETUP” and “BASS ENHANCER” settings.

**50kHz, 100kHz:**

When playing Super Audio CDs, frequencies higher than these respective frequencies are cut.

※ Set to “100kHz” when using an amplifier compatible with high frequencies.

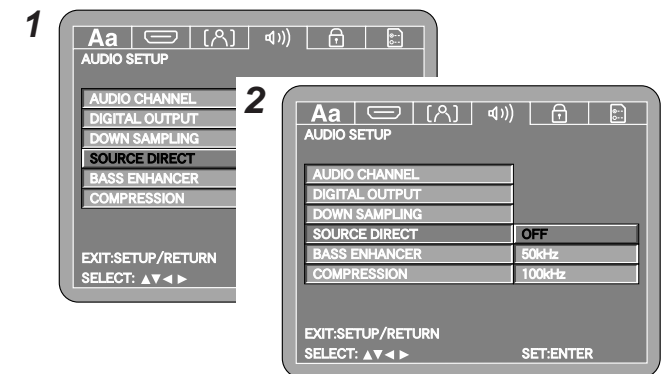

Making the initial settings



- When setting “100kHz”, first check the range of the connected amplifier and speakers to avoid damage to the connected equipment.
- When setting “50kHz” or “100kHz”, set all the speaker sizes to “LARGE” and the subwoofer to “YES”. Make analog connections if you want to play DVD-Audio discs.
- The “CHANNEL LEVEL” and “DELAY TIME” settings remain in effect even when “50kHz” or “100kHz” is set.

Bass enhancer


Sets the subwoofer output for when playing 2-channel or other sources without LFE signals.

**1** Use [△ ▽] to select “BASS ENHANCER”, then press [ENTER].

**2** Use [△ ▽] to select the item to be set, then press [ENTER].

**OFF (Upon purchase):**  
No sound is output from the subwoofer.

**ON:**  
Sound is output from the subwoofer.  
※ Set “SUBWOOFER” at “SPEAKER CONFIGURATION” to “YES”.

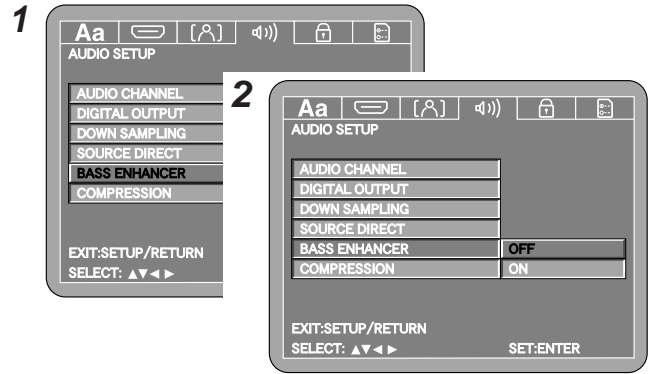

- This setting is only effective for analog outputs.
- This setting is ineffective when “SOURCE DIRECT” is set to “50kHz” or “100kHz”.

Making the initial settings

Dynamic range compression


Use this procedure to set the dynamic range of the output signals when playing DVDs recorded in Dolby Digital.

**1** Use [△ ▽] to select “COMPRESSION”, then press [ENTER].

**2** Use [△ ▽] to select the item to be set, then press [ENTER].

**OFF (Upon purchase):**  
The sound is played with the standard dynamic range.

**ON:**  
Select this to achieve a powerful sound even when the volume is low.  
This setting is suited for use at night with the volume set low.

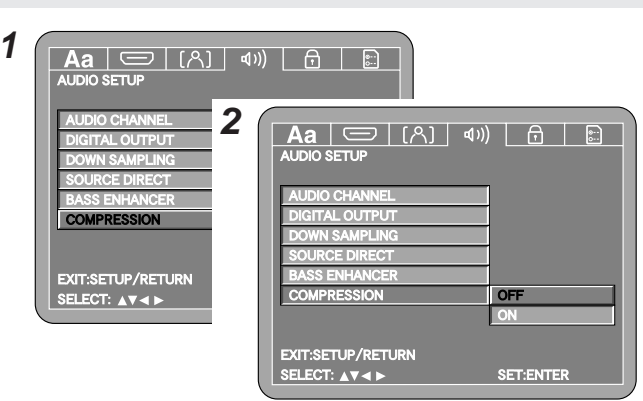

- **Dynamic range:**  
This is the ratio between the softest sound that can be played without being drowned out by the noise generated by the equipment and the loudest sound that can be produced without the sound breaking up.

## Making the initial settings

### Viewing restriction setting ( )

Use [ $\triangleleft$   $\triangleright$ ] to select “ ”.

### Viewing restriction level

A password can be set to restrict (prohibit) the playing of adult DVDs so that children or others cannot view them.

**1** Use [ $\triangle$   $\nabla$ ] to select “RATING LEVEL”, then press [ENTER].

**2** Use [ $\triangle$   $\nabla$ ] to select the setting level, then press [ENTER].

#### 0 (LOCK ALL):

This restricts playback of all DVDs.

#### 1:

This restricts playback of adult and regular DVDs.  
Select this when you only want to play DVDs for children.

#### 2 ~ 7:

This restricts playback of adult DVDs.  
Select this when you want to play both DVDs for children and regular DVDs.

#### 8 (NO LIMIT) (Upon purchase):


With this setting, all DVDs can be played.

**3** Use [NUMBER] (0 ~ 9) to input the password (4 digits), then press [ENTER].

※ The default setting for the password is “0000”.



- If the discs includes viewing restriction levels, the password input screen appears.
- If the discs does not include viewing restriction levels, viewing cannot be restricted.

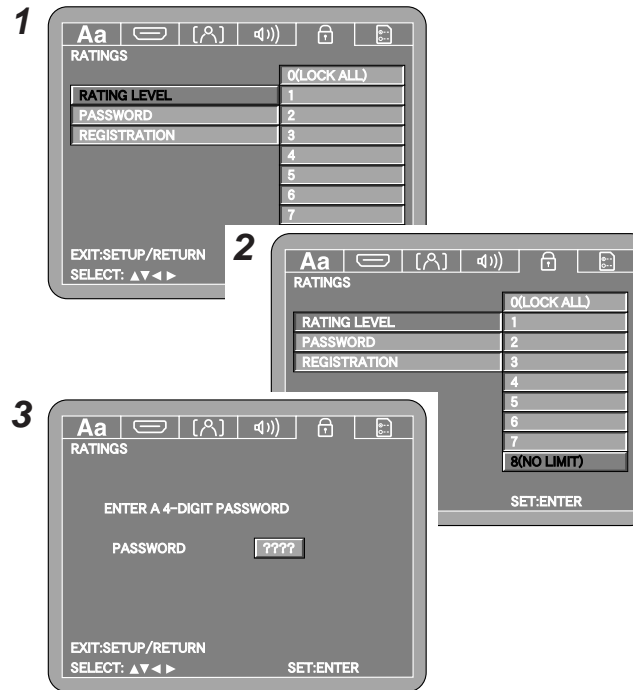


## Making the initial settings

### Password

Use this procedure to change the password for the “RATING LEVEL”.

**1** Use [ $\triangle$   $\nabla$ ] to select “PASSWORD”, use [ $\triangleright$ ] to select “CHANGE”, then press [ENTER].

**2** Use [NUMBER] (0 ~ 9) to input the passwords (4 digits) (password → new password → new password (reinput)), then press [ENTER].

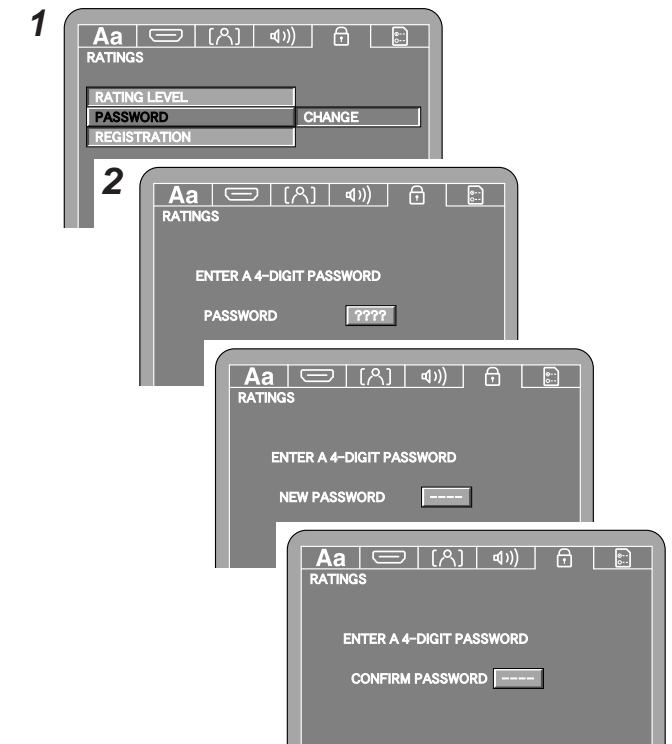

- Be careful not to forget the password.  
If you do, reset it to the default setting set when the player was purchased ( page 46).

## Making the initial settings


## Displaying the registration code

Use this procedure to display the registration code for leasing or purchasing DivX® VOD format video files using the DivX® VOD (Video On Demand) service.

**1** Use [△ ▽] to select “REGISTRATION”.

**2** Use [▷] to select “SHOW CODE”, then press [ENTER].

- The 8-digit registration code is displayed.

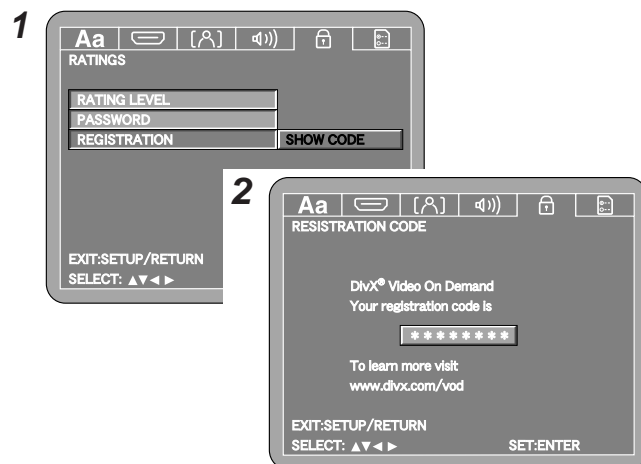

• For details, go to the URL: <http://www.divx.com/vod>

## Special settings ( )

Use [◀ ▶] to select “ ”.

## Player mode

Set the playback mode for playing the DVD-Video contents recorded on DVD-Audio discs.

**1** Use [△ ▽] to select “PLAYER MODE”, then press [ENTER].


**2** Use [△ ▽] to select the playing mode, then press [ENTER].

## AUDIO (Upon purchase):

DVD-Audio discs are played as such.

## VIDEO:

The DVD-Video contents included on DVD-Audio discs are played.

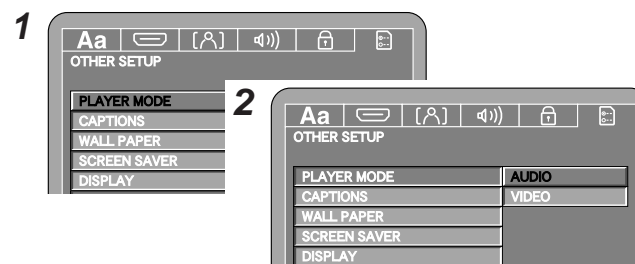

## Captions

Use this procedure to set the output of the closed caption signals to display captions using a caption decoder (commercially available).


**1** Use [△ ▽] to select “CAPTIONS”, then press [ENTER].

**2** Use [△ ▽] to select the item to be set, then press [ENTER].

## OFF (Upon purchase), ON:

Select “OFF” if you do not want to display the captions on the screen, “ON” if you want to display them.

## Making the initial settings

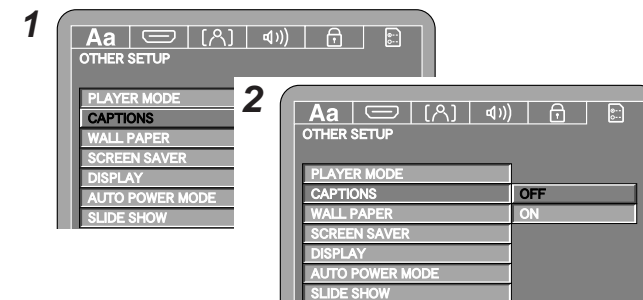

- A caption decoder is required in order to display captions.
- For DVDs including caption signals, the “ ”, “ ” or “ ” mark is displayed.

## Wallpaper


Use this procedure to set the picture to be displayed on the TV screen when in the stop mode or when playing CDs, etc.

**1** Use [△ ▽] to select “WALL PAPER”, then press [ENTER].

**2** Use [△ ▽] to select the item to be set, then press [ENTER].

## PICTURE (Upon purchase), BLACK, GRAY, BLUE:

Set the wallpaper to “PICTURE”, “BLACK”, “GRAY” or “BLUE”.

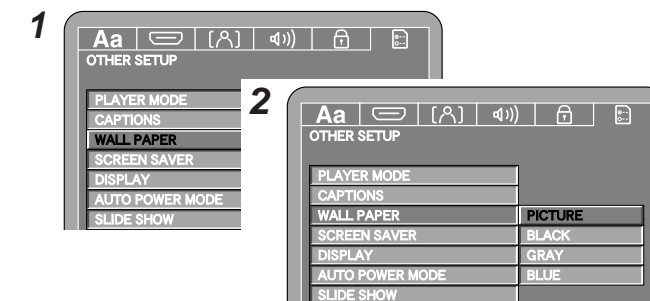

## Making the initial settings

## Screensaver

The screensaver function protects the TV screen from imprinting.

**1** Use [△ ▽] to select “SCREEN SAVER”, then press [ENTER].


**2** Use [△ ▽] to select the item to be set, then press [ENTER].

**OFF (Upon purchase):**

When this is set, the screensaver function does not work.

**ON:**

When this is set, the screensaver function is activated after about 5 minutes in the stop or pause mode.

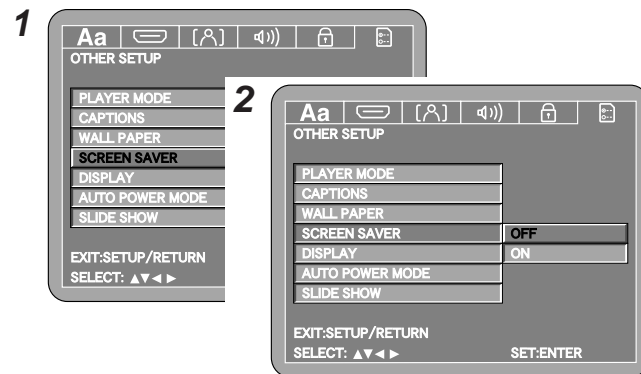

## Display


If the display is turned off with the pure direct or dimmer function, a description of operations can be displayed for about 2 seconds.

**1** Use [△ ▽] to select “DISPLAY”, then press [ENTER].

**2** Use [△ ▽] to select the item to be set, then press [ENTER].

**OFF (Upon purchase), ON:**

Set to “OFF” if you do not want the display to light, to “ON” if you do want the display to light.

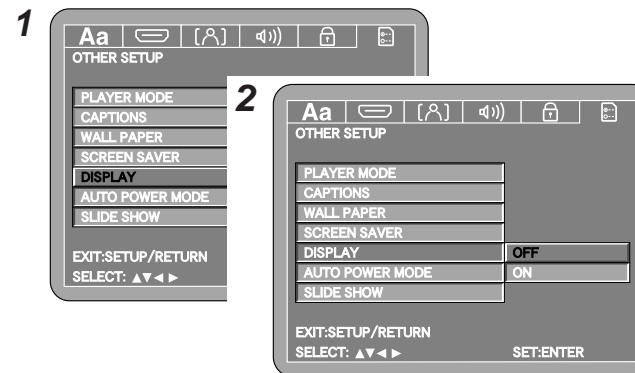

## Auto power mode

This function automatically sets the player's power to the standby mode if the player is left in the stop mode for about 30 minutes.


**1** Use [△ ▽] to select “AUTO POWER MODE”, then press [ENTER].

**2** Use [△ ▽] to select the item to be set, then press [ENTER].

**OFF (Upon purchase), ON:**

Select “OFF” if you do not want the power to be set to the standby mode automatically, “ON” if you do want it to be set to the standby mode.

## Making the initial settings

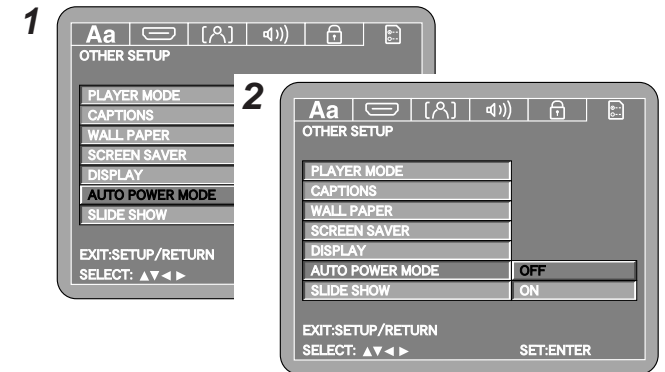

## Slide switching time


Use this procedure to set the time after which the still picture (in JPEG format) switches when playing still pictures.

**1** Use [△ ▽] to select “SLIDE SHOW”, then press [ENTER].


**2** Use [△ ▽] to select the time to be set, then press [ENTER].

**5 (Upon purchase) ~ 15 sec:**

The still picture switches after the selected time.

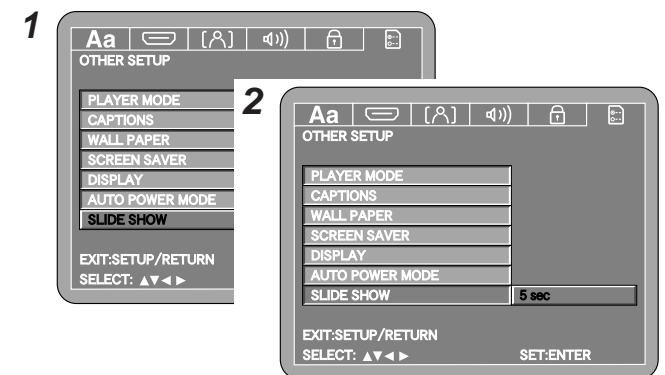

# Other settings

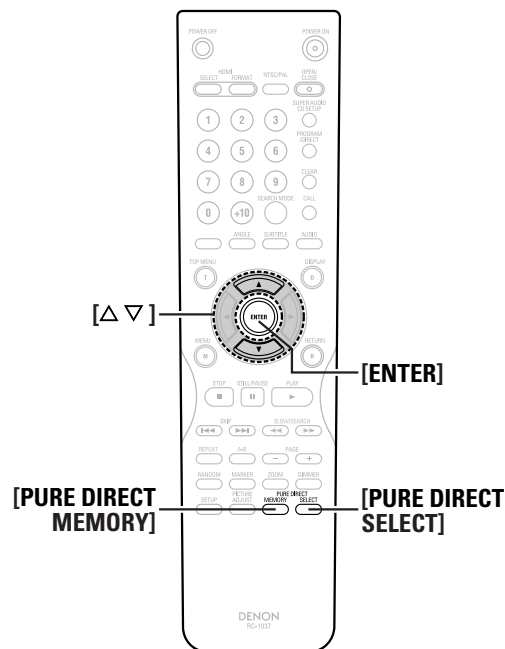

## About the button names in this explanation

< > : Buttons on the main unit

[ ] : Buttons on the remote control unit

Button name only :

Buttons on the main unit and remote control unit

## Using the pure direct mode

Use this function to stop output of video signals, etc., and output only the analog audio signals to achieve high quality sound.

### 1 In the stop mode, press [PURE DIRECT MEMORY].

- The pure direct memory screen appears.

### 2 Use [Δ ∇] to select “MODE 1” or “MODE 2”, then press [ENTER].

### 3 Use [Δ ∇] to select the item you want to set, press [ENTER], then use [Δ ∇] again to make the setting.

#### DIGITAL OUTPUT:

- ON (Upon purchase), OFF:

Select whether or not to output signals to the digital audio output terminals.

※ The DENON LINK digital output circuitry does not function.

#### VIDEO OUT:

- ON (Upon purchase), OFF:

Select whether or not to output video signals.

#### DISPLAY:

- ON (Upon purchase), OFF:

Select whether or not to light the DVD-2930CI's display.

### 4 Press [PURE DIRECT MEMORY].

- The settings are stored at “MODE 1” or “MODE 2”.

### 5 Press [PURE DIRECT SELECT] and select the setting mode.

- The mode is indicated on the display.

#### NORMAL:

All signals are output.

#### MODE 1:

The player operates as per the settings stored at “MODE 1”.


#### MODE 2:

The player operates as per the settings stored at “MODE 2”.


#### ALL OFF:

Only the analog audio signals are output.


2

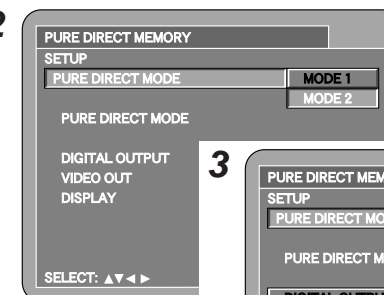

3

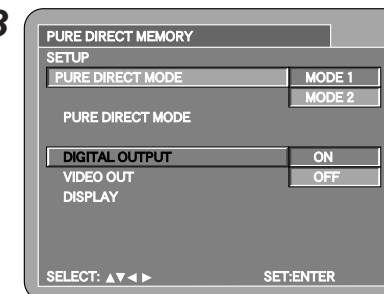

- With HDMI connections, no video or audio signals are output from the HDMI terminals if “VIDEO OUT” is set to “OFF” in step 3 or if the “ALL OFF” mode is selected in step 5.

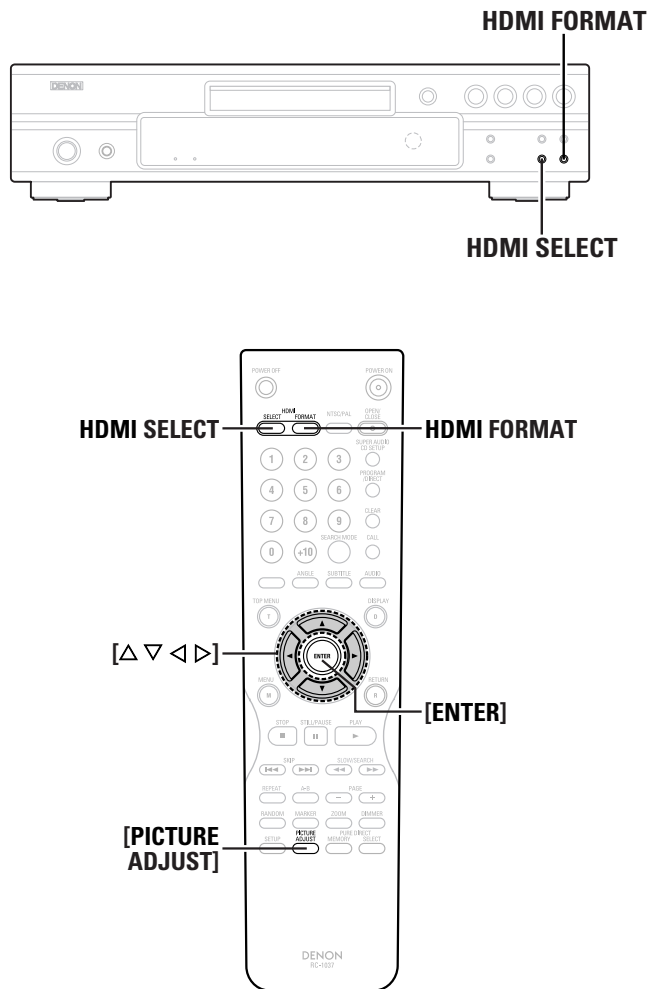

#### About the button names in this explanation

< > : Buttons on the main unit

[ ] : Buttons on the remote control unit

**Button name only :**

Buttons on the main unit and remote control unit

## Making the settings for the picture output from the HDMI terminal

### Changing the signal format

Press **HDMI SELECT** and select the setting mode.

- The mode is indicated on the display.

#### HDMI OFF (Upon purchase):

No video or audio signals are output from the HDMI terminal.

#### YCbCr:

Component format video signals and audio signals are output from the HDMI terminal.

#### RGB:

RGB format video signals and audio signals are output from the HDMI terminal.

#### PC RES.:

RGB format video signals with a resolution for use on computers and audio signals are output from the HDMI terminal. The output is set to 60 Hz, regardless of whether the disc being played in NTSC or PAL.

- ※ Set to "YCbCr" or "RGB" if the TV or monitor connected to the HDMI terminal is not compatible with computer resolutions.



- The picture may be disturbed even if the TV or monitor connected to the HDMI terminal is compatible with computer resolutions.
- When outputting video signals from the HDMI terminal, the video signals output from the component video terminals are interlaced.

### Changing the resolution

- When the signal format is set to "YCbCr" or "RGB"

Press **HDMI FORMAT** and select the mode.

- The mode is indicated on the display.

#### AUTO:

The performance of the HDMI device connected to the HDMI terminal is detected automatically and the resolution for its panel's pixel number or the maximum resolution that can be input is output.

- ※ The output resolution is set at "HDMI AUTO FORMAT" under "digital interface setting" (page 19).

#### 480/576i, 480/576P (Upon purchase), 720P, 1080i, 1080P:

The video signal from the HDMI terminal is converted to the selected resolution for output.

- ※ The video output when "480/576i" is selected is 480i for NTSC, 576i for PAL.
- ※ The video output when "480/576P" is selected is 480P for NTSC, 576P for PAL.



- The resolution is the same for "YCbCr" and "RGB".

- When the signal format is set to "PC RES.":

Press **HDMI FORMAT** and select the mode.

- Select the video resolution output from the HDMI terminal.
- The mode is indicated on the display.

#### VGA (Upon purchase):

The signal is converted to a resolution of 640 x 480 (60 Hz).

#### XGA:

The signal is converted to a resolution of 1024 x 768 (60 Hz).

#### WXGA:

The signal is converted to a resolution of 1280 x 768 (60 Hz).

#### SXGA:

The signal is converted to a resolution of 1280 x 1024 (60 Hz).



# Adjusting the picture quality

## Storing the picture quality settings in the memory

Use this procedure to store picture quality settings you have adjusted to suit your tastes at memory positions 1 to 5.


**1** Press [PICTURE ADJUST].

**2** Use [◀ ▶] to select one of memory positions “M1” to “M5”, then press [ENTER].

**3** Press [▽], use [◀ ▶] to select one setting from “Adjust 1” to “Adjust 4”, then press [ENTER].

※ For instructions on making “Adjust 4”, see “Gamma correction” (page 31).

**4** Use [◀ ▶] again to select the item to be adjusted, use [△ ▽] to adjust, then press [ENTER].  
• The settings are stored at the corresponding memory position.

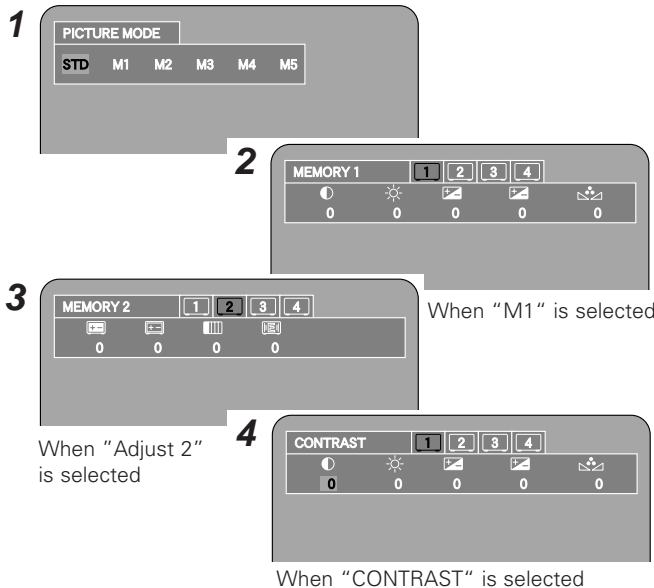

**To quit the picture quality adjustment mode:**  
Press [PICTURE ADJUST] again.

## Picture quality adjustment setting memory list


Item	Description
STD	STANDARD
M1	MEMORY1
M2	MEMORY2
M3	MEMORY3
M4	MEMORY4
M5	MEMORY5

## List of picture quality adjustment modes

Item	Description	Adjustment range (initial value)
Adjust 1	CONTRAST	Adjusts the difference between the bright and dark parts of the picture. -6 ~ +6 (0)
	BRIGHTNESS	Adjust the brightness of the picture. 0 ~ +12 (0)
	SHARPNESS (medium range)	Adjusts the sharpness of the picture for the medium frequency range. (※1) -6 ~ +6 (0)
	SHARPNESS (high range)	Adjusts the sharpness of the picture for the high frequency range. (※2) -6 ~ +6 (0)
	HUE (color tone)	Adjusts the balance between the green and red. (※3) -6 ~ +6 (0)
Adjust 2	WHITE LEVEL	Adjusts the white level. -5 ~ +5 (0)
	BLACK LEVEL	Adjusts the black level. (※2) -5 ~ +5 (0)
	CHROMA LEVEL	Adjusts the density of the colors. -6 ~ +6 (0)
	ENHANCER	Strengthens the contours of the picture. (※2) 0 ~ +11 (0)
Adjust 3	DNR (Digital Noise Reduction)	Reduces the overall level of noise on the picture. 0 ~ +3 (0)
	MPEG NR (MPEG Noise Reduction)	Reduces the noise of the contours of letters and other such parts. ON/OFF (OFF)
	SETUP LEVEL	Corrects for unnatural look in the black colors. 0 IRE/7.5 IRE (7.5)
	H.POSITION (horizontal direction)	Adjusts the left/right position. (※2) -7 ~ +7 (0)
	V.POSITION (vertical direction)	Adjusts the top/bottom position. (※2) -7 ~ +7 (0)
Adjust 4	G0 ~ G9 (gamma correction)	Detailed adjustment of the picture's brightness. 16 ~ 235 (G0=24/G1=32/G2=48 /G3=64/G4=80/G5=96 /G6=128/G7=160/ G8=192/G9=224)

※1: Does not affect the HDMI output.  
※2: Affects the progressive and HDMI output.  
※3: Does not effect the component output's interlaced output.

Other settings

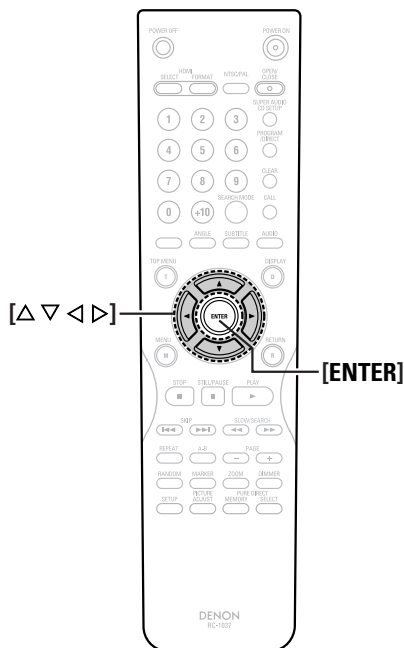

**About the button names in this explanation**

< > : Buttons on the main unit

[ ] : Buttons on the remote control unit

**Button name only :**

Buttons on the main unit and remote control unit

**Gamma correction**

Make these adjustments using numerical tables or graphs.

**1 To adjust using the numerical tables:**

At “Adjust 4”, press [▽].

To adjust using the graphs:

At “Adjust 4”, press [ENTER].

**2 Use [◀ ▶] to select the point to be adjusted, use [Δ ▽] to adjust the brightness level, then press [ENTER].**


- The settings are stored at the corresponding memory position.

※ It is not possible to set the level of the selected point to a value overlapping those of the adjacent points.

(For example, if G3 is set to 64 and G5 is set to 96, G4 cannot be set to values of 64 or less or 96 or greater.)

MEMORY 1										
G0	G1	G2	G3	G4	G5	G6	G7	G8	G9	
024	032	048	064	080	096	128	160	192	224	

(Numerical table)

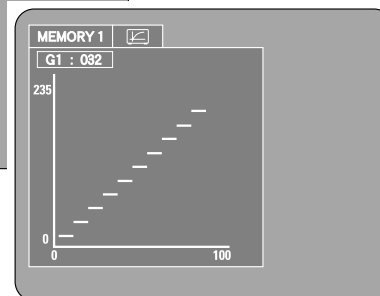

(Graph)

☐ **To set back to the standard level:**


Press [CLEAR].

Other settings


**Reference:**

Horizontal axis: Brightness level of pictures recorded on disc

Vertical axis: Brightness level of pictures upon output from the DVD-2930CI


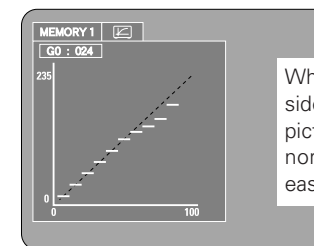


When a bright point on the disc side is adjusted to the “dark” side, pictures whose bright sections are normally hard to see become easier to see.

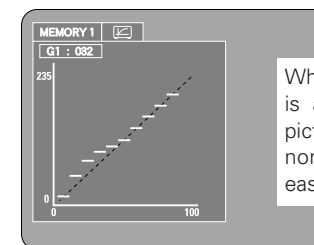

When a dark point on the disc side is adjusted to the “bright” side, pictures whose dark sections are normally hard to see become easier to see.

# Basic Operation

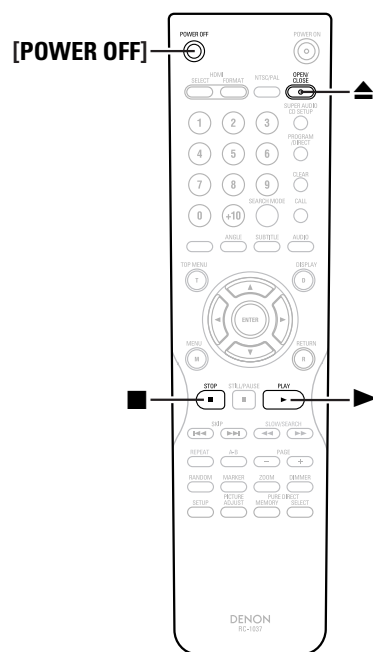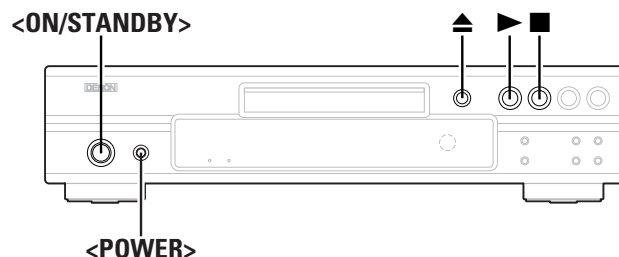

## About the button names in this explanation

< > : Buttons on the main unit

[ ] : Buttons on the remote control unit

### Button name only :

Buttons on the main unit and remote control unit

## Turning the power on

### Press <POWER>.

- "0h00m00s" is displayed if no disc is loaded.

**ON:** The power indicator lights green.

**OFF:** The power indicator turns off.

※ The power indicator lights red if the standby mode is set by pressing <ON STANDBY> or [POWER OFF].

## Turning the power off:

Press <POWER> again.



- When the power is turned off from the standby mode, it is set to the standby mode when the power is turned back on.

### NOTE:

- When in the standby mode, a very small amount of power is consumed, even if all the indicators are turned off.

## Loading discs

### Press ▲.

※ For instructions on loading discs, see page 4.

## To close the disc tray:

Press ▲ again.

## Playing discs

### Press ►.

- The "►" indicator lights and playback starts.



- For details, refer to the disc's instructions. Some discs may be designed by the software producer to operate in ways other than described in this manual.

## To stop playback

### Press ■.

- Playback stops and the wallpaper is displayed.

※ If "AUTO POWER MODE" at "OTHER SETUP" is set to "ON" in the initial settings (page 27), the power automatically turns off and is set to the standby mode if the player is left in the stop mode for about 30 minutes.

## Resume play memory function



If ■ is pressed during playback, the position at which the disc was stopped is stored in the memory ("►" flashes on the display). If ► is pressed now, playback resumes from the point at which it was stopped.

The resume play memory function is canceled if the disc tray is opened or ■ is pressed again.



- The resume play memory function only functions for discs for which the elapsed time is indicated on the display during playback.
- The resume play memory function does not function during menu playback.

## Basic Operation

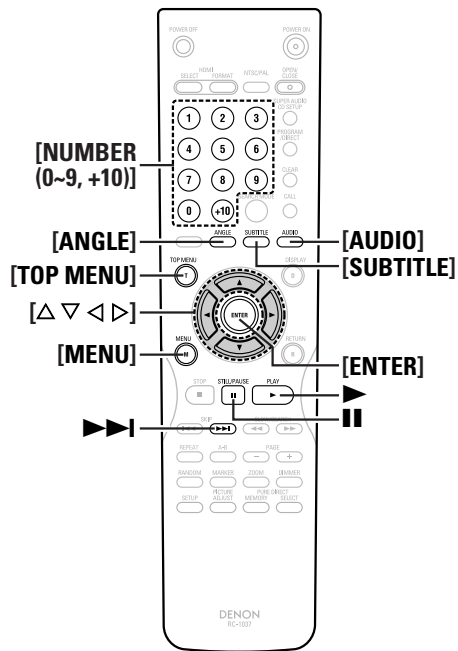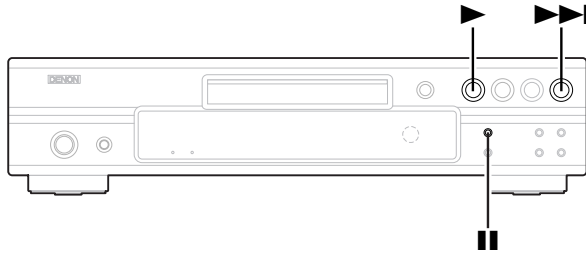

### About the button names in this explanation

< > : Buttons on the main unit

[ ] : Buttons on the remote control unit

#### Button name only :

Buttons on the main unit and remote control unit

### To pause playback

#### Press II.

- The “II” indicator lights and the pause mode is set.


#### To resume playback:

Press ►.

### About DVD-Video discs

#### Titles and chapters:

DVD-Video discs are divided into several large sections (titles) and small sections (chapter). These sections are all allotted numbers, called the title numbers and chapter numbers.

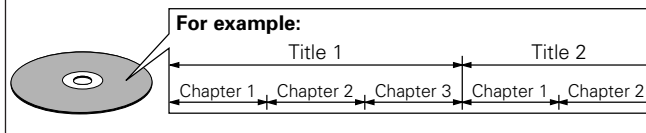


### Playing DVD-Video discs

Some DVDs display menu screens.  
Select the desired item, then start playback.

**1** Use [Δ ▽ ◀ ▶] to select the item you want to see.

**2** Press [ENTER].  
• Playback starts.

## Basic Operation

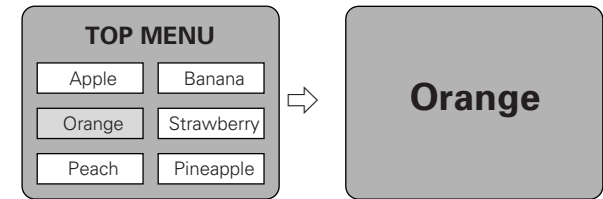

**Example:** When “Orange” is selected




- While playing a DVD, press [TOP MENU] or [MENU] to return to the menu screen.
- To display the next page of the menu, press ►►.

Basic Operation


Using the top menu and DVD menu

For DVDs containing multiple titles, the desired title can be selected and played from the top menu.  
Some DVDs also have special menus called “DVD menu”.

- 1 Press **[TOP MENU]** or **[MENU]** during playback.
- 2 Use **[Δ ▽ ◀ ▶]** or **[NUMBER] (0 ~ 9, +10)** to select the desired title.  
• Step 3 can be skipped if you use **[NUMBER] (0 ~ 9, +10)**.
- 3 Press **[ENTER]** or **▶**.  
• Playback starts.

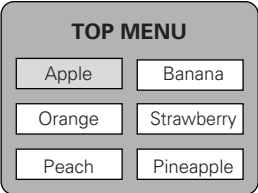

Example: Top menu

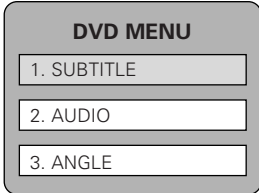

Example: DVD menu

Switching the audio language (Multiple-Audio Function)

The audio language can be switched when playing DVDs containing multiple audio languages.

- 1 Press **[AUDIO]** during playback.  
• The currently playing audio number is displayed.
- AUDIO 1/3 : DOLBY D3/2.1 ENGLISH
- 2 Use **[Δ ▽]** to select the desired language.  
※ The display turns off when **[AUDIO]** is pressed.

Switching the subtitle language (Multiple-Subtitle Function)

The subtitle language can be switched when playing DVDs containing multiple subtitle languages.

- 1 Press **[SUBTITLE]** during playback.  
• The currently playing subtitle number is displayed.
- SUBTITLE 01/03 : ENGLISH
- 2 Use **[Δ ▽]** to select the desired language.  
※ The display turns off when **[SUBTITLE]** is pressed.

Basic Operation

Switching the angle (Multiple-Angle Function)

The angle can be switched when playing DVDs containing multiple angles.



- 1 Press **[ANGLE]** during playback.  
• The currently playing angle number is displayed.
- 3/5
- 2 Use **[Δ ▽]** to select the desired angle.  
※ The display turns off when **[ANGLE]** is pressed.

About DVD-Audio discs

**Groups and tracks:**  
DVD-Audio discs are divided into several large sections (groups) and small sections (tracks). These sections are all allotted numbers, called the group numbers and track numbers.

**For example:**

Group 1			Group 2	
Track 1	Track 2	Track 3	Track 1	Track 2

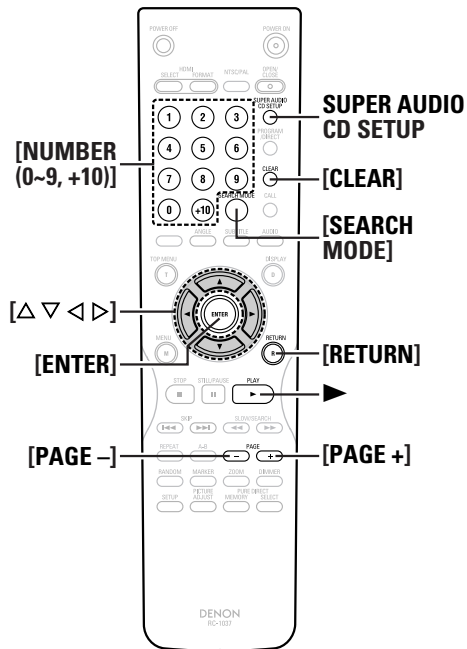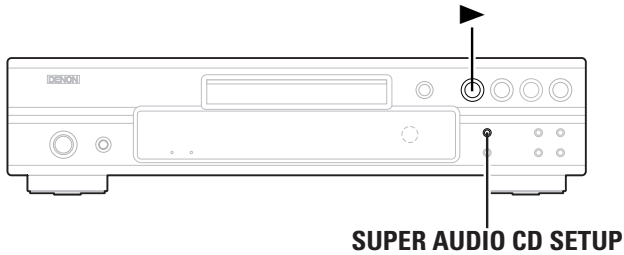

### About the button names in this explanation

< > : Buttons on the main unit

[     ] : Buttons on the remote control unit

**Button name only :**

Buttons on the main unit and remote control unit

## Switching between groups and tracks

- 1** In the stop or play mode, press **[SEARCH MODE]** and select the search mode.

- The mode switches each time the button is pressed and is indicated at the bottom left of the screen, as shown below.

GROUP 1/3 ↔ TRACK 3/10

- 2** Use [NUMBER] (0 ~ 9, +10) input the number of the group or track you want to play.

- Playback starts from the specified group or track.



- The search mode set by pressing **[SEARCH MODE]** is stored in the memory until the power is turned off.

## Playing bonus groups

Some DVD-Audio discs contain special groups called "bonus groups" which can only be played by inputting a password.

- 1** In the Stop mode, press **[SEARCH MODE]** and select the “GROUP”.

- The "GROUP" indicator lights.

- 2** Use **[NUMBER]** (0 ~ 9, +10) to input the bonus group number.

- 3** Use [NUMBER] (0 ~ 9) to input the passwords (4 digits), then press [ENTER].

- Playback starts from the first track in the specified group.

※ In some cases the password is input from a menu screen. Follow the instructions on the screen.

☐ If you input the wrong password:

Press **[CLEAR]**.

## Basic Operation

## Selecting still pictures

For DVD-Audio discs containing still pictures, the desired still picture can be selected.

Press **[PAGE +]** or **[PAGE -]** during playback.

※ Some discs may be designed by the software producer so that the image cannot be selected.

## About Super Audio CDs

There are three types of Super Audio CDs.

- ① Single layer disc

Single layer Super Audio CD with only an HD layer.

- ②Dual layer disc

Super Audio CD with a double HD layer, offering extended playing time and high sound quality.

- ③ Hybrid disc

Two-layer Super Audio CD with an HD layer and a CD layer. The signals on the CD layer can be played on a regular CD player.

- About the HD layer


All Super Audio CDs contain an HD (High Density) layer with high density Super Audio CD signals. This layer can contain a stereo channel area, a multi-channel area, or both a stereo channel and multi-channel area.

### Types of Super Audio CDs

Single layer disc

Dual layer disc

Hybrid disc

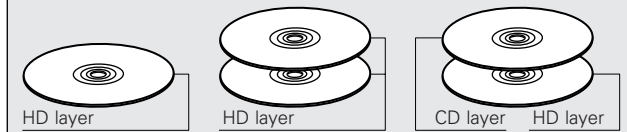

## Basic Operation

**Setting the top priority playback layer for Super Audio CDs**

Use this procedure to set the layer to be played when the disc is loaded.

Press **SUPER AUDIO CD SETUP** and select the layer.

**MULTI (Upon purchase):**

The multi-channel area of the HD layer is played.

**STEREO:**

The 2-channel area of the HD layer is played.

**CD:**

 
The CD layer is played.



- When playing discs that do not contain the selected area or layer, the disc is played with the following order of priority: MULTI, STEREO, CD

**About Video and Music CDs****Tracks:**

Video and music CDs are divided into several sections (tracks). These sections are all allotted numbers, called the track numbers.

**Playback Control (Video CDs):**

With video CDs for which “playback control” or the like is indicated on the disc or jacket, the desired scene or information can be selected from menu screens displayed on the TV.


**Playing discs with playback control**

On most video CDs with playback control, a menu screen is displayed. Select the item you want to see then start playback.

Use **[NUMBER]** (0 ~ 9, +10) to select the item you want to see.

- Playback starts.

Example:

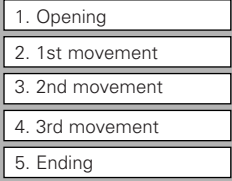
☐ **To return to the menu screen.**

Press **[RETURN]** during playback.

**About discs containing MP3 and WMA format files**
☐ **Listening to CDs and CD-R/CD-RW discs containing MP3 files**

There are many music distribution sites on the Internet allowing you to download music files in MP3 or WMA format. When music files are downloaded from such sites following the instructions provided at the site then burned onto a CD-R/CD-RW disc, they can be played on the DVD-2930CI.

☐ **Listening to WMA and CD-R/CD-RW discs containing MP3 files**

The DVD-2930CI can play music files stored on CD-R/CD-RW discs in MP3 or WMA (Windows Media® Audio) \* format.

“Windows Media” and “Windows” are registered trademarks or trademarks in the United States and other countries of the Microsoft Corporation of the United States.

\* WMA (Windows Media® Audio)

Audio codec of the Microsoft Corporation of the United States.


# 1 Load the disc onto which the music files in MP3 or WMA format have been burned.

## Basic Operation


## 2 Use **[Δ ▽ ◀ ▶]** to select the folder you want to play, then press **[ENTER]**.

## 3 Use **[Δ ▽ ◀ ▶]** to select the file you want to play, then press **[ENTER]** or **▶**.


- Playback starts.

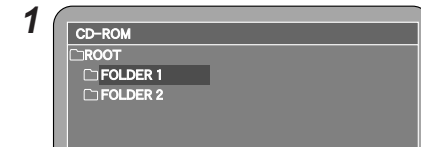



Example: MP3 screen

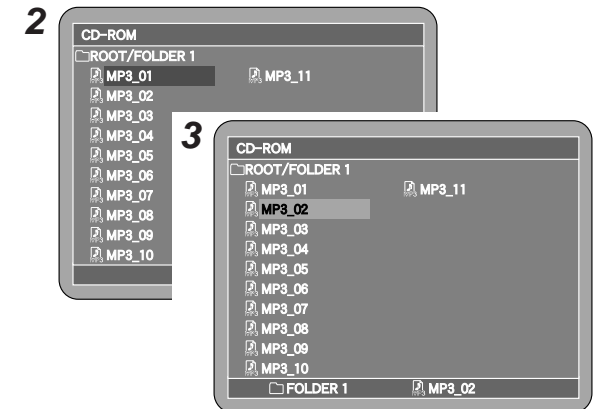

Example: WMA screen

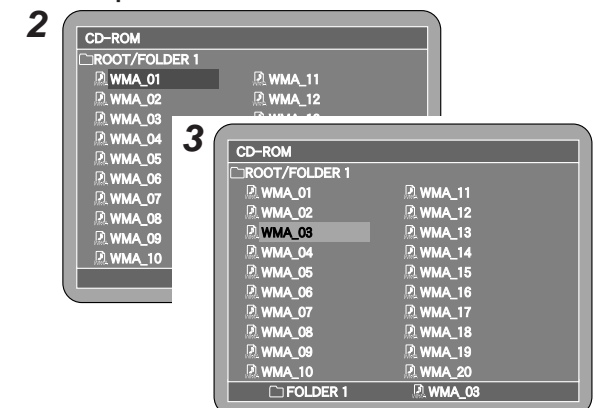

## Basic Operation

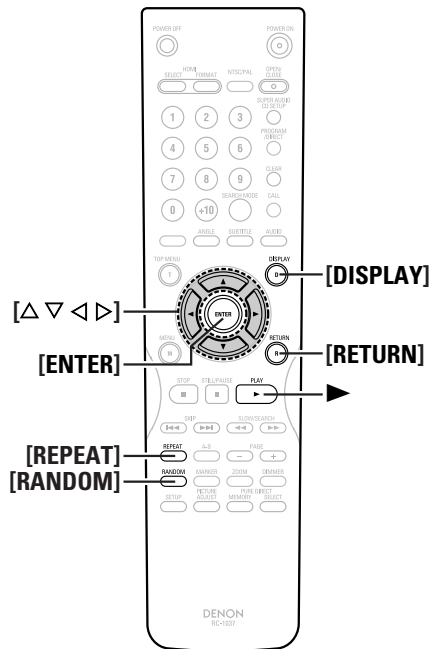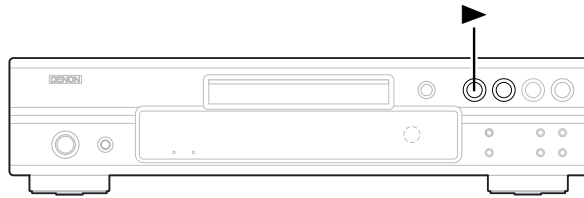

## About the button names in this explanation

< > : Buttons on the main unit

[ ] : Buttons on the remote control unit

## Button name only :

Buttons on the main unit and remote control unit

☐ To change the folder to be played:

Press **[RETURN]**, then select the new folder.

☐ To change the file to be played:

 
Use **[Δ ▽ ◀ ▶]** to select the file, then press **[ENTER]**.

☐ Playing in random order:


In the stop mode, press **[RANDOM]**, then press **[ENTER]** or **▶**.

☐ Playing in repeat order:

Press **[REPEAT]**.


☐ Switching the time display:

 Press **[DISPLAY]** during playback.



## Basic Operation



- When writing MP3/WMA files on a CD-R or CD-RW disc, set the writing software's format to "ISO9660 Level 1". The files may not play properly if they are recorded in other formats. Also note that with some writing software it is not possible to record in ISO9660 format. For details, refer to the instructions of your writing software.
- The DVD-2930CI is compatible with the "MPEG-1 Audio Layer-3" MP3 standard (sampling frequency (fs) of 32, 44.1 or 48 kHz). Not compatible with other formats such as "MPEG-2 Audio Layer-3", "MPEG-2.5 Audio Layer-3", "MP1", "MP2", "MP3 PRO", etc.
- The DVD-2930CI is compatible with WMA files with sampling frequencies (fs) of 32, 44.1 or 48 kHz.
- The DVD-2930CI is compatible with MP3 files with bit rates of 32 to 320 kbps, WMA files with bit rates of 64 to 160 kbps.
- Be sure to add the extensions ".MP3" or ".mp3" to MP3 files, respectively.  
Be sure to add the extensions ".WMA" or ".wma" to WMA files, respectively.
- The DVD-2930CI can play [discs containing] up to 255 folders and 1000 files.
- When playing MP3 or WMA files, the signals are converted to PCM for output from the digital output terminals.
- The DVD-2930CI can display folder and file names like titles. Up to 11 characters (letters of the English alphabet, numbers and the "\_" (underscore) sign) are displayed. Characters that cannot be displayed are indicated by an "\*" (asterisk).
- Copyright-protected files cannot be played.  
Note that depending on the software used for burning and other conditions, some files may not play or display correctly.
- The positions of the folders or files may have been changed by the writing software when burning the MP3/WMA files onto the CD-R/CD-RW disc, so the files may not play in the expected order.
- The DVD-2930CI is not compatible with the ID3-Tag function.
- The DVD-2930CI is not compatible with packet-write software.
- The DVD-2930CI is not compatible with playlists.



Basic Operation

About discs containing DivX® format files

CD and DVD discs containing digital images recorded in DivX®※ format can be played.


※ DivX®:  
A digital video compression technology with DivX® video coding by DivX Networks Inc.

- 1

Load a disc containing files in DivX® format.
- 2

Use [△ ▽ ◀ ▶] to select the folder you want to play, then press [ENTER].
- 3

Use [△ ▽ ◀ ▶] to select the file you want to play, then press [ENTER] or ▶.  
• Playback starts.

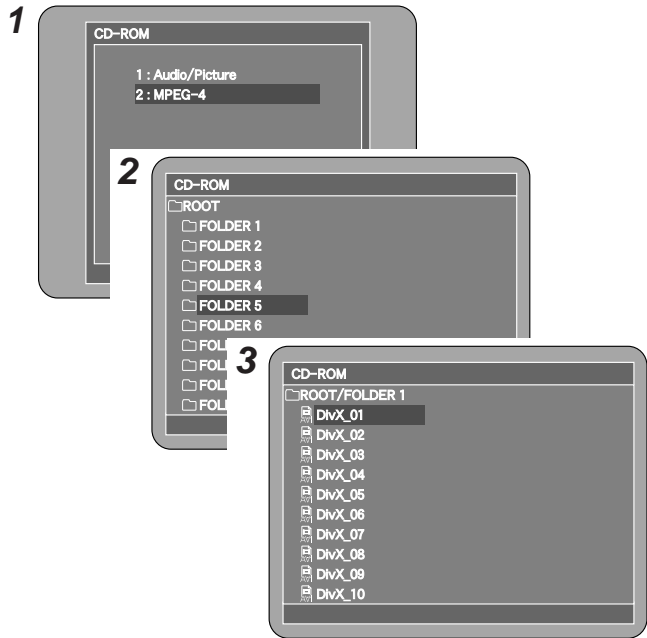


☐ **To change the folder to be played:**  
In the stop or resume mode, press [RETURN], and select the folder again.

☐ **To change the file to be played:**  
In the stop or resume mode, use [△ ▽ ◀ ▶] to select the file again.

☐ **Playing in random order:**  
In the stop mode, press [RANDOM], then press ▶.

 ☐ **Playing in repeat order:**  
Press [REPEAT].



☐ **Switching the time display:**  
Press [DISPLAY] during playback.

Elapsed time per track (SINGLE ELAPSED) ↔ Remaining time per track (SINGLE REMAIN)



- The DVD-2930CI can play [discs containing] up to 255 folders and 1000 files.
- Note that depending on the software used for burning and other conditions, some files may not play or display correctly.
- The DVD-2930CI is compatible with DivX® audio sampling frequencies (fs) of 8 to 48 kHz.
- The DVD-2930CI is not compatible with motion compensation technology (GMC) or PCM Audio.

Basic Operation

About discs containing still picture files

Use this procedure to play JPEG format files recorded on CD-R/CD-RW discs or Picture CDs or Fujicolor CDs as slideshows.


Playing a disc containing files in JPEG format

- 1



Load a disc containing still picture files in JPEG format.
- 2

Use [△ ▽ ◀ ▶] to select the folder you want to play, then press [ENTER].
- 3

Use [△ ▽ ◀ ▶] to select the file you want to play, then press ▶.  
• Playback starts.

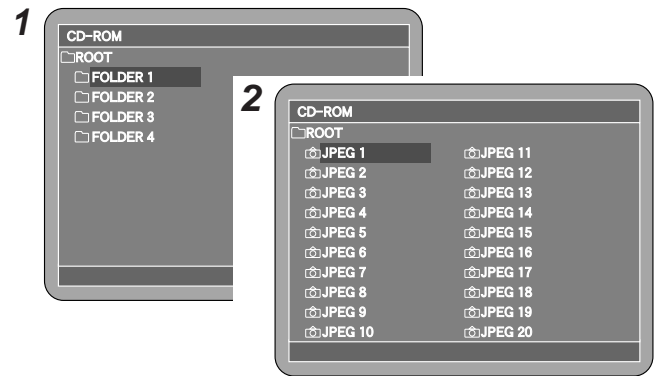

## Basic Operation

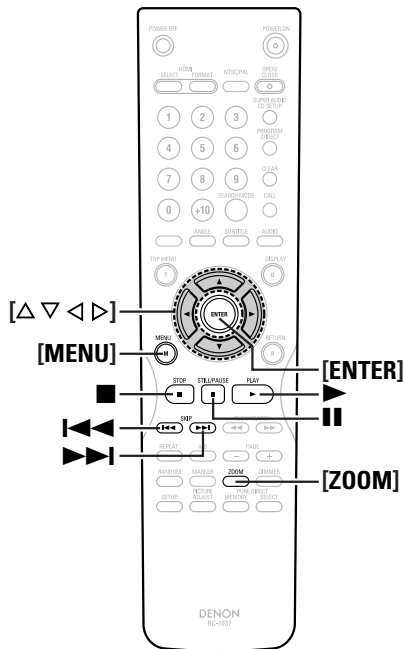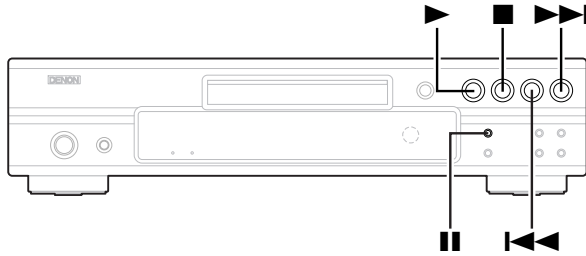

## About the button names in this explanation

< > : Buttons on the main unit

[ ] : Buttons on the remote control unit

## Button name only :

Buttons on the main unit and remote control unit

## Playing Picture CDs and Fujicolor CDs

The DVD-2930CI can play Kodak Picture CDs and Fujifilm Fujicolor CDs, so you can view the photographs recorded on them on your TV.

※ Picture CDs and Fujicolor CDs are part of a service for converting photographs taken on conventional film cameras into digital data and storing them on a CD.

For details on Picture CDs and Fujicolor CDs, contact a store offering film development services.

## Load a disc containing the still pictures.

Once the disc is loaded, playback starts automatically.

The still pictures are played continuously until ■ is pressed.

## To select the still picture to be played:

During playback, press ■ or [MENU] to display all the pictures, then use [Δ ∇ ◁ ▷] to select the desired picture and press [ENTER].

## Cueing to the desired still picture:

Press I◀◀ or ▶▶I during playback.

I◀◀: The previous still picture is displayed.

▶▶I: The following still picture is displayed.

## Pausing playback:

Press II.

Press ▶ to resume playback.

## Rotating the still pictures:

In the play or still mode, use [Δ ∇ ◁ ▷] to rotate the still picture.

Δ ∇ : The still picture is flipped vertically.

◁ : The still picture is rotated 90° counterclockwise.

▷ : The still picture is rotated 90° clockwise.

## Basic Operation

## To play an image in the zoom mode:

In the pause mode, press [ZOOM]. ("ZOOM" is displayed on the TV screen.)

- The magnification changes each time the button is pressed.  
150% → 200% → 50% → 100% → 150%

※ When the still picture is enlarged, press [ENTER] ("MOVE" is displayed on the TV screen), then use [Δ ∇ ◁ ▷] to move the zoomed picture.

※ Pictures cannot be zoomed in the continuous playback (slideshow) mode.



- The DVD-2930CI is compatible with picture data recorded in JPEG format, but it is not guaranteed that all picture data in JPEG format can be played.
- File sizes of up to 30MB can be played.
- When burning JPEG files onto CD-R/CD-RW discs, do so with the writing software set to "ISO9660 level 1".
- Be sure to add the extension ".JPG" or ".JPE" to JPEG files. (JPEG files written on Macintosh computers cannot be played.)

## NOTE:

- Your recordings may be used for your personal enjoyment only, and may not be used without the consent of the copyright holder as per copyright laws.
- Do not play music CDs (CD-DA format) or CD-R/CD-RW discs containing files other than files in MP3, WMA, DivX® or JPEG format. Attempting to play some files may cause malfunction or damage.

## Basic Operation

## Repeat and random play of MP3, WMA, JPEG and DivX® files

**FOLDER:**

Playback starts from the selected file, and the other files in that folder are played in order.

**FOLDER REPEAT:**

Playback starts from the selected file, and all the files in that folder are played repeatedly.

**ALL REPEAT:**

Playback starts from the selected file, and all the files on the disc are played repeatedly.


**RANDOM:**

Playback starts from the selected file, and the other files in that folder are played in random order.

**FILE REPEAT:**

The selected file is played repeatedly.

## Convenient operations

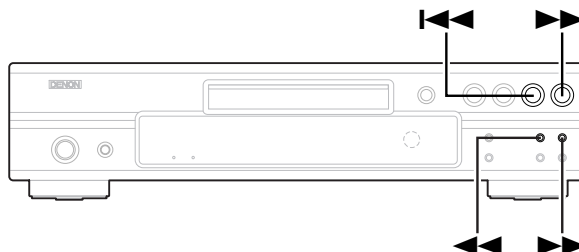

## Fast-forwarding/Fast-reversing

During playback, press ◀◀ or ▶▶.

- The fast-forward/fast-backward speed increases each time one of these buttons is pressed. The speed can be changed in 5 steps.

## □ Returning to normal playback:

Press ▶.

## Moving to the beginning

During playback, press ◀◀◀ or ▶▶▶.

- A number of chapters/tracks equivalent to the number of times the button is pressed is skipped.
- When pressed once in the backwards direction, playback returns to the beginning of the currently playing chapter/track.

## Searching using the NUMBER buttons


**1** During playback, press [SEARCH MODE] and select the setting mode (for DVD-Video and DVD-Audio discs).

- For DVD-Video discs : TITLE ↔ CHAP
- For DVD-Audio discs : GROUP ↔ TRACK

**2** Use [NUMBER] (0 ~ 9, +10) to input the number of the chapter/track you want to play.



- The search mode set by pressing [SEARCH MODE] is stored in the memory until the power is turned off.

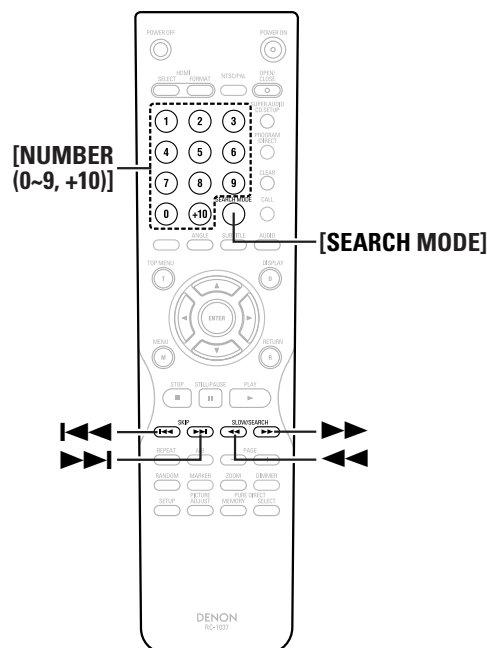



## About the button names in this explanation

- < > : Buttons on the main unit
- [ ] : Buttons on the remote control unit

## Button name only :

Buttons on the main unit and remote control unit

## Convenient operations

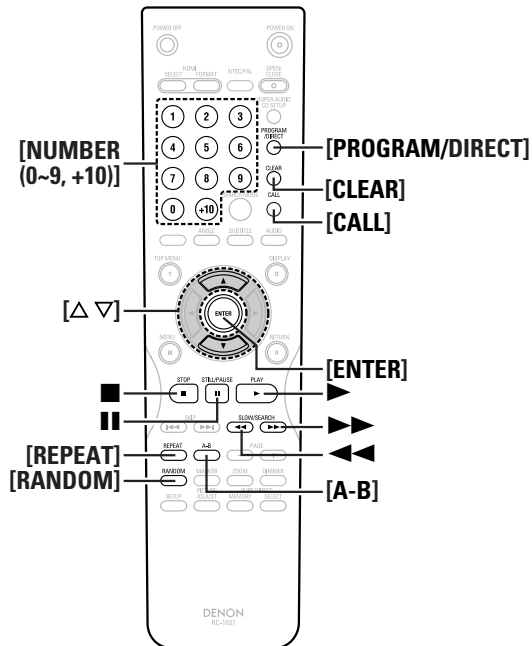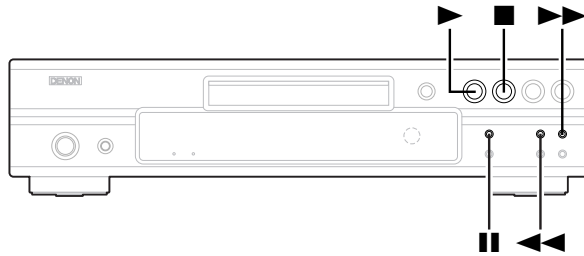

### About the button names in this explanation

- < > : Buttons on the main unit  
[ ] : Buttons on the remote control unit

#### Button name only :

Buttons on the main unit and remote control unit

## Frame-by-frame playback (for DVD-Video discs and Video CDs only)

### In the pause mode, press **II**.

- The picture advances one frame each time the button is pressed.

### Returning to normal playback:

Press **▶**.



- For DVD-Audio discs, frame-by-frame playback is only possible with the video part.

## Slow playback

### In the pause mode, press **◀◀** or **▶▶**.

- The speed of slow playback increases each time one of the buttons is pressed. The speed can be changed in 5 steps.

### Returning to normal playback:

Press **▶**.



- For DVD-Audio discs, slow playback is only possible with the video part.
- Reverse slow play is not possible with video CDs.


## Repeat playback

### During playback, press **[REPEAT]**.


- Each time the button is pressed, the repeat mode switches and playback starts in the respective repeat mode.

## Convenient operations

### For DVD-Video discs

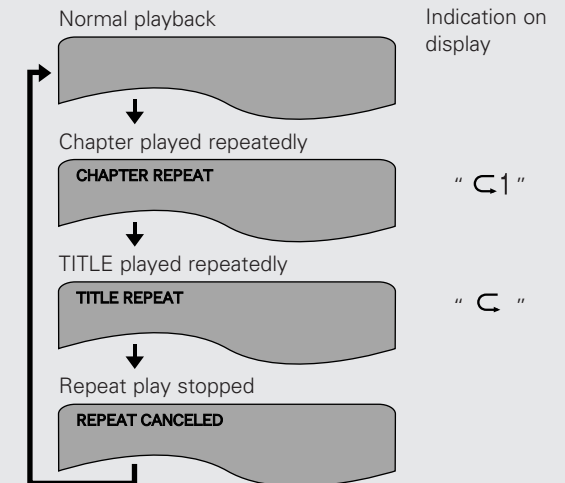


### For DVD-Audio discs

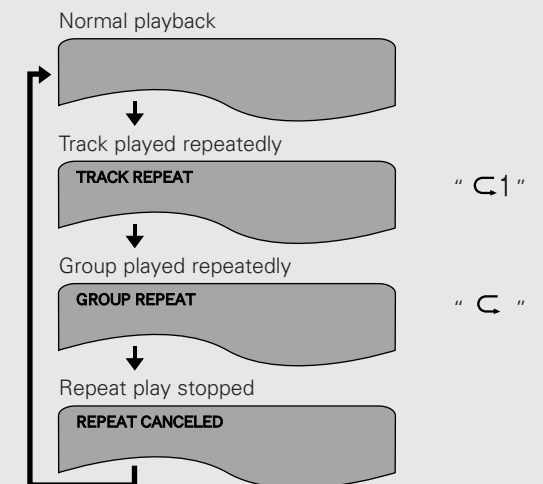

## Convenient operations

## For Video CDs / Super audio CDs / Music CDs discs

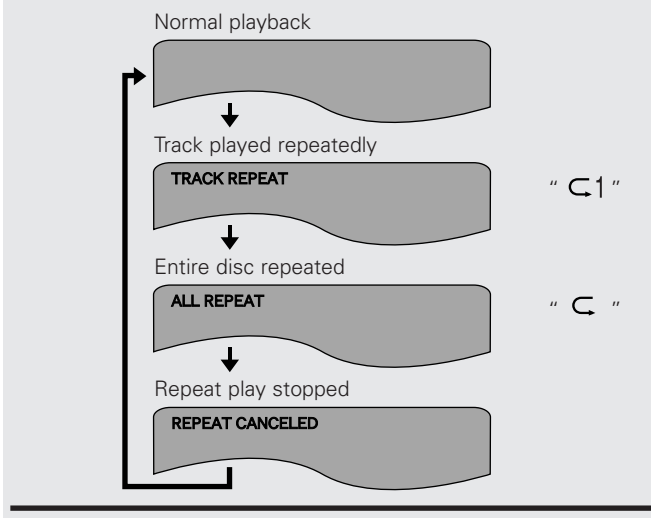

## Repeating a section between two specific points (A-B repeat playback)

## 1 Press [A-B] during playback.

- This sets the starting point A.
- The " C A " indicator appears on the display.

## 2 Press [A-B] again.

- End point B is set and the A-B section is played repeatedly.
- The " C A-B " indicator appears on the display.

## □ Returning to normal playback:

Press [A-B] until "A TO B CANCELED" appears on the display.



- For some discs, the repeat play and A-B repeat functions do not work.
- The repeat play and A-B repeat functions may not work for discs on which the elapsed playing time is not indicated on the DVD-2930CI's display during playback.
- During A-B repeat playback, the subtitles just before or after the A-B section may not be displayed.


## Programmed playback

For DVD-Audio discs, video CDs, music CDs and Super Audio CDs, track numbers can be programmed to play in the desired order.

**Programmed playback is not possible with DVD-Video discs.**

## 1 In the stop mode, press [PROGRAM/DIRECT].

- The "PROG" indicator appears on the display.

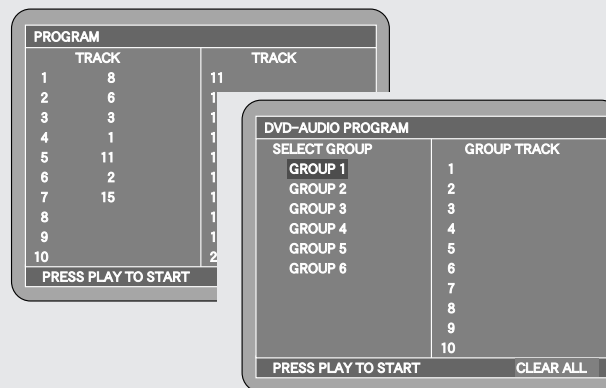

## 2 Use [NUMBER] (0 ~ 9, +10) to input the number to be set.

- Up to 20 tracks can be programmed.

※ For DVD-Audio discs, use [Δ ▽] to select "group number" and "track number", then press [ENTER].

## 3 Press ►.

- Playback starts in the programmed order.

## □ To check the contents of the program:

Press ■ twice to stop the disc.

- The program screen is displayed.
- In addition, when [CALL] is pressed while in the stop mode, the programmed number is shown on the display.

## □ Clearing individual tracks from programs:

Video CDs, Super audio CDs and Music CDs:

In the stop mode, press [CLEAR].

- The last track set in the program is deleted each time the button is pressed.

DVD-Audio:

At the program screen, press [D], select the track to be programmed using [Δ ▽], then press [CLEAR].

## Convenient operations

## □ To clear the entire program

Press [PROGRAM/DIRECT].


## Playing in random order

For DVD-Audio discs, video CDs, music CDs and Super Audio CDs, the tracks can played in random order.

**Random playback is not possible with DVD-Video discs.**

## 1 In the stop mode, press [RANDOM].

- The "RAND" indicator appears on the display.

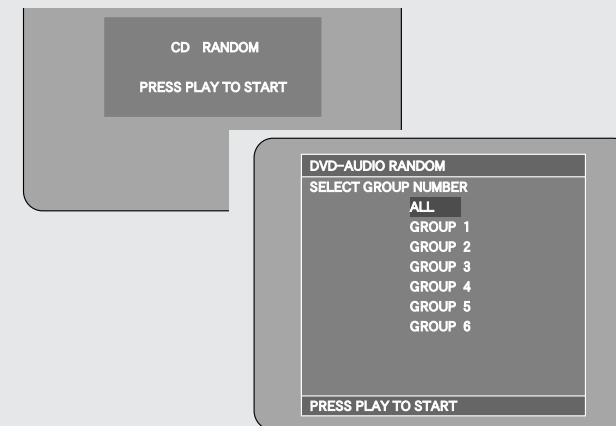

## 2 Press ►.

- Random playback starts.

※ For DVD-Audio discs, the group selection screen is displayed. Use [Δ ▽] to select "ALL" or "GROUP number", then press [ENTER]. ("\*" is displayed next to "group number".) All the groups are played in random order when "ALL" is selected, and only the tracks within that group are played when "group number" is selected.


## □ Returning to normal playback:

In the stop mode, press [RANDOM].



- Random playback may not be possible for some discs.

# Convenient operations

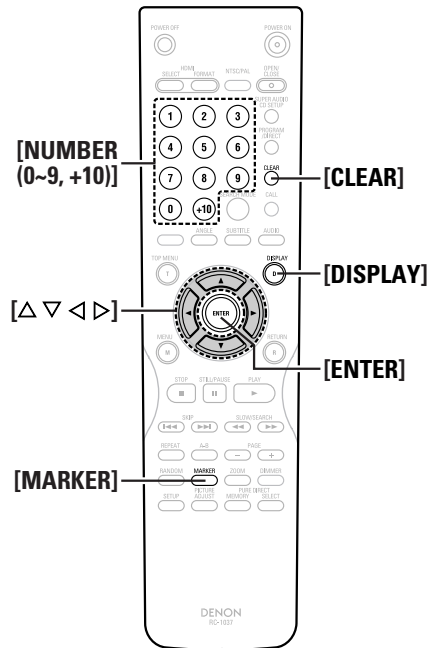

## About the button names in this explanation

< > : Buttons on the main unit

[ ] : Buttons on the remote control unit

### Button name only :

Buttons on the main unit and remote control unit


## Operating using the on-screen display

This function lets you display information about the disc (titles, chapters, time, etc.) and specify the part you want to play.


### 1 Press [DISPLAY] during playback.

- The display on the TV screen switches each time the button is pressed.
- The items displayed differ from disc to disc.

#### For DVD-Video discs

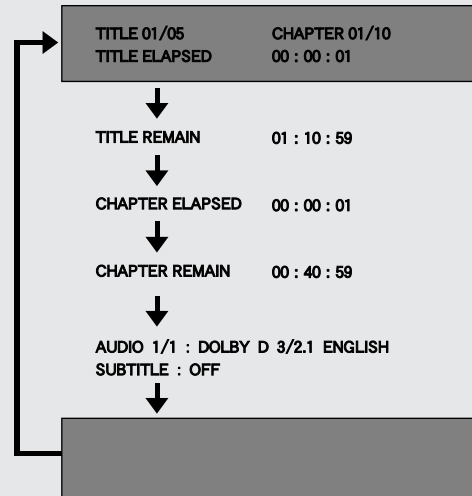


#### For DVD-Audio discs

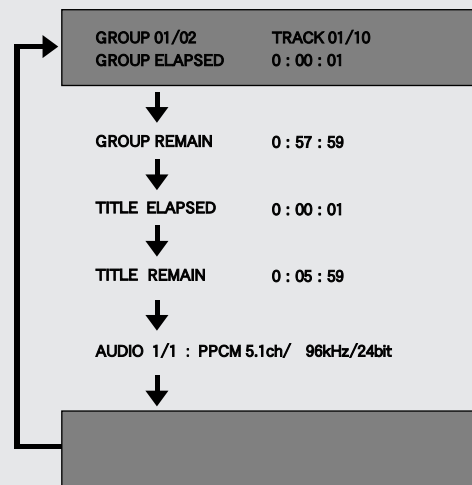

# Convenient operations

## For Video CDs / Super audio CDs / Music CDs discs

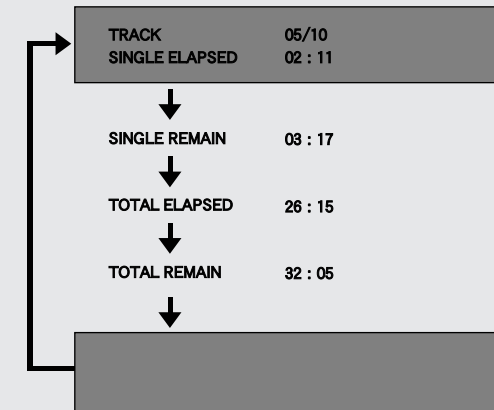

- ※ For video and music CDs, only the elapsed time switches.
- ※ Some Super Audio CDs contain text information. In such cases, the album titles and artists are also displayed in the stop mode, and the title of the currently playing track is also displayed in the play mode.
- ※ For Super Audio CDs containing text information, the total remaining time is displayed twice. The second time, the text information is shown on the DVD-2930CI's display.

- ※ It may not be possible to display the disc information either for discs on which the elapsed playing time is not indicated on the DVD-2930CI's display during playback.

### 2 Use [Δ ▽ ◀ ▶] to select the item you want to change.

- The selected item is displayed in a yellow frame.

## Convenient operations

### ❑ Specifying the elapsed time

Use **[NUMBER]** (0 ~ 9, +10) to input the time, then press **[ENTER]**.

- Playback starts from the specified point.
- ※ For some discs it is not possible to specify the time.

#### For DVD-Video discs:

**Example:** To specify 1h32m47s

Press **[0]** → **[1]** → **[3]** → **[2]** → **[4]** → **[7]** → **[ENTER]**.

#### For Video CDs / Music CDs discs:

**Example:** To specify 1m26s

Press **[0]** → **[1]** → **[2]** → **[6]** → **[ENTER]**.

#### For Super audio CDs:

**Example:** To specify 1h32m47s (92m47s)

Press **[0]** → **[9]** → **[2]** → **[4]** → **[7]** → **[ENTER]**.

### ❑ Specifying groups, titles, tracks or chapters

Use **[NUMBER]** (0 ~ 9, +10) to input the number, then press **[ENTER]**. (For DVD discs)

Use **[NUMBER]** (0 ~ 9, +10) to input the number. (For Video CDs / Music CDs / Super Audio CDs discs)


- Playback starts from the specified point.
- ※ For some discs it is not possible to specify the time.

## Marking scenes you want to see again later

Scenes you want to see again later can be marked so you can play them any time.


### Adding marks

#### 1 Press **[MARKER]** during playback.

- “” is displayed if there is no mark.

#### 2 Use **[◀ ▶]** to select the marker, then press **[ENTER]** at the point you want to mark.

- A number is displayed.
- Up to 8 parts can be marked.

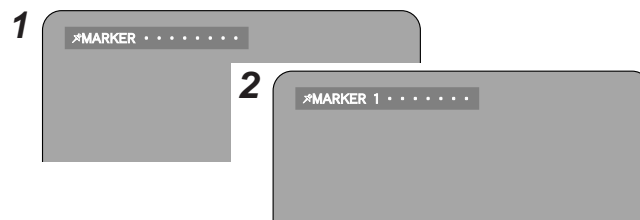

## Convenient operations

### Calling out marked scenes

Use **[◀ ▶]** to select the mark number, then press **[ENTER]**.

- Playback starts from the marked scene.




#### ❑ To turn off the marker screen:

Press **[MARKER]**.

#### ❑ Clearing the selected mark number:



Use **[◀ ▶]** to select the mark number, then press **[CLEAR]**.

- “” is displayed.



- Depending on where the mark is placed, the subtitles may not be displayed.
- The marks are stored in the memory until the power is turned off or the disc is removed from the player.

## Convenient operations

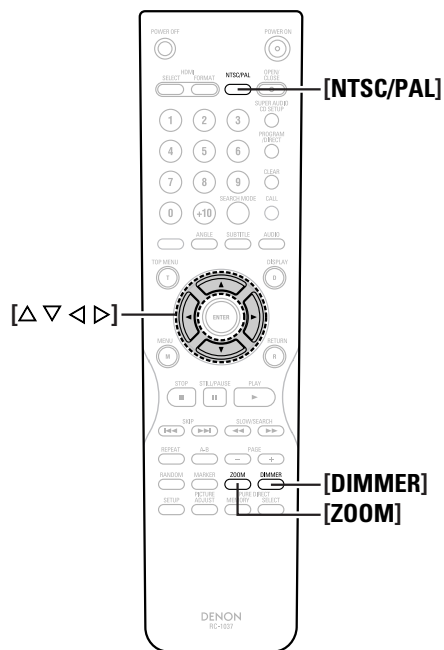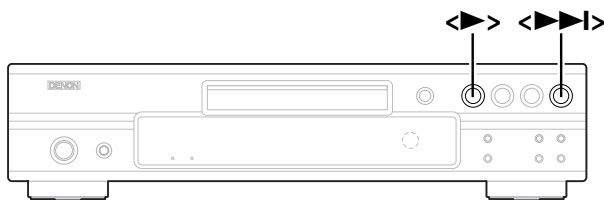

### About the button names in this explanation

< > : Buttons on the main unit

[ ] : Buttons on the remote control unit

#### Button name only :

Buttons on the main unit and remote control unit

## Zoomed play

- 1 Press **[ZOOM]** while in the play or pause mode.
  - The magnification changes each time the button is pressed.

### For DVD-Video / video-CD :

x 2.0 → x 3.0 → x 1.0

### For DivX®:

x 1.0 → x 1.5 → x 2.0 → JUST

- 2 Press **[△ ▽ ◀ ▶]**.
  - The zoomed picture moves.



- Zooming may not operate properly for certain scenes.
- The quality may be lower and the picture may be shaky when it is zoomed.
- Zoomed play may not work properly for some discs.
- Zoomed play is not possible at the top menu or other menu screens.

## Convenient operations

## Setting the video format

Set this according to the video format of the connected TV.

### Press **[NTSC/PAL]**.

NTSC → PAL → MULTI



- The picture will not be displayed properly if a video format different from the connected TV's type is set.

## Adjusting the brightness of the display

Use this procedure to adjust the brightness of the DVD-2930CI's display.

The brightness can be switched in 3 steps. The display can also be turned off.

### Press **[DIMMER]**.

- The brightness switches each time the button is pressed.



## Others

### About the DENON LINK function

DENON LINK is a balanced transfer type digital link using high speed transfer elements. Connecting the DENON LINK terminal to a DENON AV amplifier equipped with a special terminal using a special cable enables high speed, high quality transfer of digital audio signals with little loss of signal quality, resulting in high quality sound production. DENON LINK is an exclusive DENON digital interface, allowing digital transfer of the 2 channels of 192 kHz/24 bit digital signals of DVD-Audio discs and of PCM multi-channel signals. In addition, DENON LINK 3rd Edition allows for full specification digital transfer of the audio contents of Super Audio CDs. The “DENON LINK” indicator lights on the display during DENON LINK processing.

### AL24 Processing Plus

AL24 Processing Plus is an analog waveform reproduction technology compatible even with the high bit rates and high sampling rates of next generation media.

AL24 Processing Plus conducts digital data interpolation based on the digital data that is input to achieve analog waveforms near those the sounds must have had in the natural environment. The sound is reproduced with 24-bit quality, increasing the music reproducing performance when the volume is low and achieving reverberations that seem to suck you into the concert hall. AL24 Processing Plus is provided for not only the front left and right channels but also the surround left and right, center and subwoofer channels.

The “AL24 PLUS” indicator lights on the display during AL24 Processing Plus processing.

### Copyright protection technology

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

### Resetting

If the display is abnormal or the main unit or remote control unit do not function, reset the DVD-2930CI using the procedure described below.

**1 In the stop mode, press <▶> and <▶▶|> simultaneously.**

**2 Check that the “INITIALIZE” indicator turns off from the TV screen, then release the buttons.**

- This completes the resetting procedure.



- If the resetting procedure is not completed, start over from step 1.

### Registered trademarks

The DVD-2930CI is manufactured using the technologies listed below (in random order).

- “NSV” is a trademark of Analog Devices, Inc.
- “HDMI, the HDMI long and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.”
- “HDCD<sup>®</sup>”, HDCD<sup>®</sup>, High Definition Compatible Digital<sup>®</sup> and Microsoft<sup>®</sup> are either registered trademarks or trademarks of Microsoft Corporation, Inc. in the United States and/or other countries. HDCD system manufactured under license from Microsoft Corporation, Inc. This product is covered by one or more of the following: In the USA: 5,479,168, 5,638,074, 5,640,161, 5,808,574, 5,838,274, 5,854,600, 5,864,311, 5,872,531, and in Australia: 669114. Other patents pending.
- Manufactured under license from Dolby Laboratories. “Dolby” and the double-D symbol are trademarks of Dolby Laboratories.
- “DTS” and “DTS Digital Surround” are registered trademarks of Digital Theater Systems, Inc.
- “KODAK” is a trademark of Eastman Kodak Company.
- “FUJICOLOR CD” is a trademark of Fuji Photo Film Co, Ltd.
- “Windows Media<sup>™</sup>”, “Windows<sup>®</sup>” are a trademarks of Microsoft Corporation, Inc.
- DivX, DivX Certified, and associated logos are trademarks of DivX, Inc. and are used under licence.

Others

Troubleshooting

If a problem should arise, first check the following:

1. Are all the connections correct ?

2. Is the set being operated as described in the Operating Instructions ?

If this unit is not operating properly, check the items listed in the table below. Should the problem persist, there may be a malfunction. Disconnect the power immediately and contact your store of purchase.

Symptom	Check	Page
Power does not turn on.	• Plug the power supply cord into the power outlet.	12
Playback does not start even when the ► button is pressed, or starts but stops immediately.	• Condensation? (Let sit 1 or 2 hours) • You are attempting to play a disc other than one with one of the marks on page 3. • Wipe the dirt off the disc or replace the disc.	3, 4 3 4
Picture does not appear.	• Check the connections. • Check whether "VIDEO OUT" in the pure direct settings is set to "OFF" or "ALL OFF". • Set the TV's input to "video".	9 ~ 12 28 —
No sound is heard or the sound is hard to hear.	• Check the connections. • Set the proper inputs (TV, stereo, etc.). • Check the "DIGITAL OUTPUT" and "COMPRESSION" settings. • Digital signals are not output for Super Audio CDs. Use analog or DENON LINK 3rd connections. • No audio signals are output from the HDMI terminal if "VIDEO OUT" or "DIGITAL OUTPUT" in the pure direct settings is set to "OFF" or "ALL OFF". • When HDMI connections are made with a device not compatible with HDMI Ver. 1.1, the audio signals of DVD-Audio discs that are copyright protected with CPPM are not output.	9 ~ 12 — 23 10, 11 28 12
Menu playback does not work for video CDs.	• Menu playback only works for video CDs with playback control.	36
Picture is disturbed when fast-forwarded or fast-reversed.	• The picture may be somewhat disturbed. This is normal.	—
Buttons do not operate.	• Some discs may prohibit certain operations.	32
Subtitles are not displayed.	• Subtitles cannot be displayed for DVDs that do not contain subtitles. • The subtitles are set to "off". Set the subtitles.	— 16
The audio (or subtitle) language cannot be switched.	• The language cannot be switched unless the disc contains more than one language. • With some discs, the audio (or subtitle) language is switched not as described in this manual but by using the DVD menu screen, etc.	— 34

Others

Symptom	Check	Page
The angle cannot be switched.	• The angle cannot be switched unless the DVD contains more than one angle. In some cases, multiple angles are only provided for specific scenes.	34
Playback does not start when a title is selected.	• Check the "Viewing restriction level" setting.	25
You have forgotten the password set for restricting viewing. Reset all the initial setting values to the values set upon purchase.	• Use the following procedure to reset all the initial setting values to the values set upon purchase. Use the following procedure to reset all the initial setting values to the values set upon purchase. In the stop mode, press the ► and ►► buttons simultaneously. (Check that the "INITIALIZE" indicator turns off from the TV screen.)	46
The audio or subtitle language is not the language set in the initial settings.	• The selected language is not set if the DVD does not contain sound or subtitles in that language.	16
The picture is not displayed in 4:3 (16:9) aspect ratio.	• Set the "TV ASPECT" and "SQUEEZE MODE" items properly in function of your TV.	20, 21
Menu screen messages are not displayed in the desired language.	• Check the "DISC MENUS" setting at "LANGUAGE SETUP" in the initial settings.	16
Picture does not appear with HDMI connections.	• Check the HDMI connections. (Check the lighting conditions of HDMI-related indicators.) • Check whether the compatible input formats of the connected monitor device match the DVD-2930CI's input format (HDMI FORMAT). • Check whether "VIDEO OUT" in the pure direct settings is set to "OFF" or "ALL OFF".	11, 12 11, 12 28
The set cannot be operated with the remote control unit.	• Insert the batteries in the proper direction, checking the ⊕ and ⊖ marks. • Replace the batteries with new ones. • Point at the remote control sensor when operating. • Operate within a distance of 7 meters from the remote control sensor. • Remove the obstacle.	5 5 5 5 —

## Others

## Specifications

□ **Audio performance**

<b>Signal format:</b>	NTSC / PAL
<b>Applicable discs:</b>	(1)DVD-Audio / DVD-Video discs 12 cm 1 side 1 layer, 12 cm 1 side 2 layers / 12 cm 2 sides 2 layers (1 side 1 layer) 8 cm 1 side 1 layer, 8 cm 1 side 2 layers / 8 cm 2 sides 2 layers (1 side 1 layer) (2)Super Audio CDs 12 cm 1 layer / 12 cm 2 layer / 12 cm Hybrid (3)Compact Disc (CD-DA / VIDEO CD) : 12 cm / 8 cm disc
<b>S-Video output:</b>	Y output level : 1Vp-p (75 $\Omega$ /ohms) / C output level : 0.286 Vp-p Output terminal : S-Video, 1 set
<b>Video output:</b>	Output level : 1Vp-p (75 $\Omega$ /ohms) / Output terminal : Pin-jack, 1 set
<b>Component video output:</b>	Y output level : 1Vp-p (75 $\Omega$ /ohms) PB/CB output level / PR/CR output level : 0.648 Vp-p (75 $\Omega$ /ohms) Output terminal : Pin-jack, 1 set
<b>HDMI output:</b>	Output terminal : 19-pin HDMI terminal, 1 set
<b>Analog audio output:</b>	Output level : 2 Vrms (10 k $\Omega$ /kohms) 2 channels (L/R) output terminal : Pin-jack, 1 set Multi channels (FL/FR/C/SL/SR/SW) : Pin-jack, 1 set
<b>Audio output characteristics:</b>	(1)Frequency response ① DVD (linear PCM) : 2 Hz ~ 22 kHz (48 kHz Sampling) : 2 Hz ~ 44 kHz (96 kHz Sampling) : 2 Hz ~ 88 kHz (192 kHz Sampling) ② Super audio CD : 2 Hz ~ 100 kHz ③ CD : 2 Hz ~ 20 kHz (2)S/N : 118 dB (3)Harmonic distortion : 0.001 % (4)Dynamic range : 106 dB
<b>Digital audio output:</b>	Output level : Optical output terminal, 1 set / Coaxial output terminal, 1 set : DENON LINK output terminal, 1 set

□ **General**

<b>Power supply:</b>	AC 120 V, 60 Hz
<b>Power consumption:</b>	45 W (In the standby mode : Approx. 1W)
<b>Maximum external dimensions:</b>	434 (W) x 102 (H) x 386 (D) mm (17-3/32" x 4-1/64" x 15-3/16") (including protruding parts)
<b>Mass:</b>	7.6 kg (16.8 lbs.)

□ **Remote control unit (RC-1037)**

<b>Remote control type:</b>	Infrared pulse
<b>Batteries:</b>	R6P/AA Type (two batteries)
<b>External dimensions:</b>	58 (W) x 230 (H) x 35 (D) mm (2-9/32" x 9-3/64" x 1-3/8")
<b>Mass:</b>	190 g (0.42 lbs.) (included batteries)

\* For purposes of improvement, specifications and design are subject to change without notice.

**DENON**

TOKYO, JAPAN  
[www.denon.com](http://www.denon.com)

Denon Brand Company, D&M Holdings Inc.  
Printed in China 00D 511 4451 003